

Thermal Network Wide-area Hybrid Camera

Quick Start Guide









Foreword

General

This manual introduces the installation, functions and operations of the thermal network wide-area hybrid camera (hereinafter referred to as "the Camera"). Read carefully before using the Camera, and keep the manual safe for future reference.

Safety Instructions

The following signal words might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, reductions in performance, or unpredictable results.
 LASER RADIATION	Indicates a laser radiation hazard. Take care to avoid exposure to a laser beam.
 TIPS	Provides methods to help you solve a problem or save time.
 NOTE	Provides additional information as a supplement to the text.

Revision History

Version	Revision Content	Release Time
V1.0.0	First release.	February 2022

Privacy Protection Notice

As the device user or data controller, you might collect the personal data of others such as their face, fingerprints, and license plate number. You need to be in compliance with your local privacy protection laws and regulations to protect the legitimate rights and interests of other people by implementing measures which include but are not limited: Providing clear and visible identification to inform people of the existence of the surveillance area and provide required contact information.

About the Manual

- The manual is for reference only. Slight differences might be found between the manual and the product.
- We are not liable for losses incurred due to operating the product in ways that are not in compliance with the manual.
- The manual will be updated according to the latest laws and regulations of related jurisdictions. For detailed information, see the paper user's manual, use our CD-ROM, scan the QR code or visit our official website. The manual is for reference only. Slight differences might be found between the electronic version and the paper version.

- All designs and software are subject to change without prior written notice. Product updates might result in some differences appearing between the actual product and the manual. Please contact customer service for the latest program and supplementary documentation.
- There might be errors in the print or deviations in the description of the functions, operations and technical data. If there is any doubt or dispute, we reserve the right of final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and company names in the manual are properties of their respective owners.
- Please visit our website, contact the supplier or customer service if any problems occur while using the device.
- If there is any uncertainty or controversy, we reserve the right of final explanation.

Important Safeguards and Warnings

This section introduces content covering the proper handling of the device, hazard prevention, and prevention of property damage. Read carefully before using the device, and comply with the guidelines when using it.

Transportation Requirements



- Do not place heavy stress on the device, allow it to fall, violently vibrate or immerse it in liquid during transportation. Handle the device with care to avoid damaging the internal precision parts.
- The complete package is necessary for transportation and storage. It is strictly forbidden to transport the device without full packaging. Whether it is delivered by the contractor or returned to the factory for repair, we will assume no responsibility for any damage or problems caused during transportation due to the incomplete package being sent.

Storage Requirements



- Store the device under allowed humidity and temperature conditions.
- Do not place the device in a humid, dusty, extremely hot or cold site that has strong electromagnetic radiation or poor ventilation.
- Do not place heavy stress on the device, allow it to fall or collide with other objects, violently vibrate or immerse it in liquid during storage.

Installation Requirements



- All service personnel must have required certification or qualified training for performing installations and maintenance of electric apparatuses in environments that have explosive gas. They must also be trained and certified to work at heights, and must have knowledge and skills in the following areas:
 - ◇ Basic knowledge and skills in installing CCTV system and components.
 - ◇ Basic knowledge and skills in low-voltage wiring and in connecting low-voltage electronic circuits.
- All installation and operations must conform to the local electrical safety code and standards.
- Strictly comply with the local electrical safety code and standards, and check whether the power supply is correct before operating the device.
 - ◇ When selecting the power adapter, the power supply requirements (such as rated voltage) are subject to the device label.
 - ◇ We recommend using the power adapter provided with the device.
 - ◇ The power supply must conform to the requirements of ES1 in IEC 62368-1 standard and be no higher than PS2. Please note that the power supply requirements are subject to the device label.

- Make sure that the power is off when you connect the cables, install or disassemble the device.
- An emergency disconnect device must be installed during installation and wiring at a readily accessible location for emergency power cut-off.
- Protect the power cord and wires from being walked on or squeezed particularly at plugs, power sockets, and the point where they exit from the device.
- Do not expose the device to heat sources such as a radiator, heater, stove or other types of heating equipment. This is to avoid the risk of fire.
- Do not connect multiple devices to the same power adapter to avoid the risk of overheating or fire if the rated load is exceeded. Please use the power adapter provided by the manufacturer.

 **WARNING**

- A high joule surge protector must be installed when using the device in environments with strong thunder storms or high induced voltage, such as in high voltage transformer substations.
- We recommend you use the device with a lightning protection device for stronger protection against lightning. For outdoor scenarios, strictly comply with the lightning protection regulations. The device must be installed by a certified lightning protection contractor.
- The lightning protection standards of buildings must be taken into consideration when designing the lightning protection and grounding for outdoor circuits. They must conform to the related national and industrial standards. The grounding device must meet the dual requirements of system anti-interference and electrical safety, and must not be short-circuited or mixed with the neutral line of the strong power grid.



- Appropriate brackets must be installed when the device cannot be used alone.
- Do not pull on the cable to avoid damaging the device.
- Do not place heavy stress on the device, allow it to collide with other objects, and do not violently vibrate or immerse it in liquid during installation.
- Do not connect the device to two or more kinds of power supplies, to avoid safety risks and damage to the device.
- Do not expose the device to environments with strong magnetic fields to avoid damage to the device.
- Do not install the device in an environment that has strong vibrations, such as in a vehicle or ship.
- Remove the electrostatic film from the visible window and the thermal imaging lens cover after installation is complete.
- Do not block the ventilation opening near the device to avoid the device being damaged from heat accumulation.
- Use the accessories suggested by the manufacturer. Installation and maintenance must be performed by qualified professionals.
- Make sure a durable and reliable waterproof treatment has been applied to the connectors of the network and power cables, to avoid damaging the device.
- Protect the accessories that come with the device for future maintenance and debugging.
- Make sure that the device is installed horizontally (the bubble inside the spirit level stays in the middle), and on a stable surface that is resistant to deformation.
- Power on the device for inspection of basic functions before installing it in a high location. This is to avoid reinstalling it if it behaves abnormally.
- Do not place the device in environments with smoke, vapor, heavy dust, or that have high temperatures to avoid damage to the device.

- If a circular connector comes with the device, make sure it is securely screwed in place. Otherwise, the device might behave abnormally due to erosions or oxidation of the connector or the pins.
- Make sure the wire diameter of the cables meets the requirements of the corresponding distance to avoid equipment damage caused by undervoltage and overcurrent.
- Do not aim the lens at intense radiation sources (such as the sun, lasers and molten steel) to avoid damage to the thermal detector and the visible lens.



After unpacking, even if the packing bag is damaged or leaking air, the normal use of the device will not be affected.

Operation Requirements



- Do not insert foreign matter into the device to avoid the risk of short circuits, damaging the device and injuring people.



- Do not touch the heat dissipation component of the device to avoid getting burnt.



- Operating temperature: -40 °C to +70 °C (-40 °F to +158 °F).
- Do not use a temperature measuring device to measure temperatures that extend beyond its measuring range.
- Do not stain or damage optical components such as the lens and glass.
- Prevent liquid from flowing into the device to avoid damage to its internal components.
- Do not place the device in a highly humid, extremely hot or cold site.
- Use the device within the allowed humidity (less than 95% RH) and altitude (less than 3000 m) conditions.
- The operating temperature of the device must meet the requirements. Refer to the device specifications for information on the allowed temperature and humidity conditions.
- Do not expose the device to corrosive environments such as coastal areas, sea areas with thick salt fog, environments with acid gas, chemical plants and the seaside.



- There is a limit to the life cycle of the quick-wear parts. Make sure to use them correctly, and follow the manufacturer's recommendations and guidance. Log in to the official website for instructions on using the quick-wear parts.
- Devices suitable for low temperature environments automatically preheat before they start to work when placed in a low temperature environment. The preheat time depends on the ambient temperature. When it heats to a suitable temperature, the device starts to work normally.

Maintenance and Repair Requirements



- The maintenance personnel of the camera must have required certification or qualified training for installing closed-circuit television (CCTV) systems. They must also be trained and certified to

work at heights, and must have knowledge and skills in the following areas:

- ◇ Basic knowledge and skills in installing CCTV systems and components.
- ◇ Basic knowledge and skills in low-voltage wiring and in connecting low-voltage electronic circuits.
- Do not allow liquid to get into the device to avoid damage to the internal components. If any liquid flows into the device, immediately disconnect the power supply, unplug all the cables connected to the device, and contact after-sales service.
- Cut off the power before cleaning the device to avoid the risk of electrocution.



- Use the accessories suggested by the manufacturer. Installation and maintenance must be performed by qualified professionals.
- If the device produces smoke, an odd odor, noise, or behaves faulty, cut the power immediately, and contact the local dealer or service center at your earliest convenience. Do not disassemble the device. We assume no responsibility for issues caused by uninstructed maintenance.
- Clean the device body with a soft dry cloth. If there are any stubborn stains, clean them away with a soft cloth dipped in a neutral detergent, and then wipe the surface dry. Do not use volatile solvents such as ethyl alcohol, benzene, diluent, or abrasive detergents on the device to avoid damaging the coating and degrading the performance of the device.
- Use a clean cloth or lens wipe to gently wipe off the dust on the visible window. Dried stains can be washed with clean water or ordinary diluted detergent. Do not use alkaline detergents to clean the device, and do not vigorously wipe the device with a damp cloth to avoid permanently damaging the glass.

Laser Requirements

Wave Length (nm)	Diameter of Light Spot	Power (W)	Max. Beam Intensity (W/sr)
850 ± 10	Divergence angle 2°: Valid distance ≥ 600 m, beam diameter 28 m.	4.5	4.5
	Divergence angle 70°: Valid distance ≥ 80 m, beam diameter 112 m.		



LASER RADIATION

If the device is equipped with a laser beam, pay extra attention to the following:

- The laser can cause permanent damage to human eyes and skin within safe distance. Keep the device a safe distance away from humans while installing or operating the device.
- Do not use the distance measurer to measure the distance of targets that are within 50 m of the laser. The laser can permanently damage the device.
- Laser radiation can ignite flammables. Do not directly expose objects (excluding scattered or absorber) to the laser beam, and do not place volatile flammables (such as alcohol) in the working area of laser radiation products, to avoid producing laser beams or fire caused by sparks from high voltage discharge.
- Clear all the reflective objects from the working area of laser radiation products. The reflected or scattered beam of a laser can cause severe damage to eyes. Take necessary precautions when reflective objects are required for use, to minimize its reflecting and scattering range.
- Before dismantling or moving the device to another location, wait 5 minutes after the laser distance measurer finishes operating, so that the accumulated electrons inside the device can be

fully discharged. This is to avoid the risk of electrocution.

- Do not touch the circuit of the distance measurer while the device is in a working state, especially the power supply of the laser, which possesses thousands of volts of voltage.
- Install the device with laser function within 3 m of distance, and make sure there are no objects obstructing it to avoid the risk of laser burn and fire.
- When using a laser beam device, avoid exposing the device surface to laser beam radiation.

Models for Power and Network Arrester

Device	Model	Power Adapter	DC to DC Adapter (Optional)	Power Arrester	Network Arrester (Optional)
Wide-area Hybrid Camera	DC version	Standard	—	Power and Network arrests are in one	

Table of Contents

Foreword	I
Important Safeguards and Warnings	III
1 Checklist	1
2 Design	2
2.1 Dimensions	2
2.2 Cables	3
3 Basic Configuration	5
3.1 Initializing the Camera	5
3.2 Modifying IP Address	5
3.3 Live Video	6
4 Installing the Camera	7
4.1 Cable Preparation	7
4.2 Installing Micro SD or SIM Card	8
4.3 Installation Preparation	8
4.4 Installation procedure	9
4.4.1 Wall Mount	9
4.4.2 Pole Mount	12
5 Installing Waterproof Connector	15
6 Alarm Configuration	16
Appendix 1 Lightning and Surge Protection	18
Appendix 2 Cybersecurity Recommendations	19

1 Checklist

Check the package according to the following checklist. If you find something has been damaged or is missing, contact customer service.



Keep accessories safe for future use.

Table 1-1 Checklist

No.	Name	Quantity	No.	Name	Quantity
1	Thermal Network Wide-area Hybrid Camera	1	6	RJ-45 waterproof connector	1
2	Power cord	1	7	Insulating gloves	1
3	Power adapter	1	8	Legal and regulatory information	1
4	Quick start guide	1	9	Waterproof teflon tape	1
5	Accessory bag	1	10	Installation guide	1

2 Design

2.1 Dimensions

Figure 2-1 Dimensions of the Camera (unit: mm [inch])


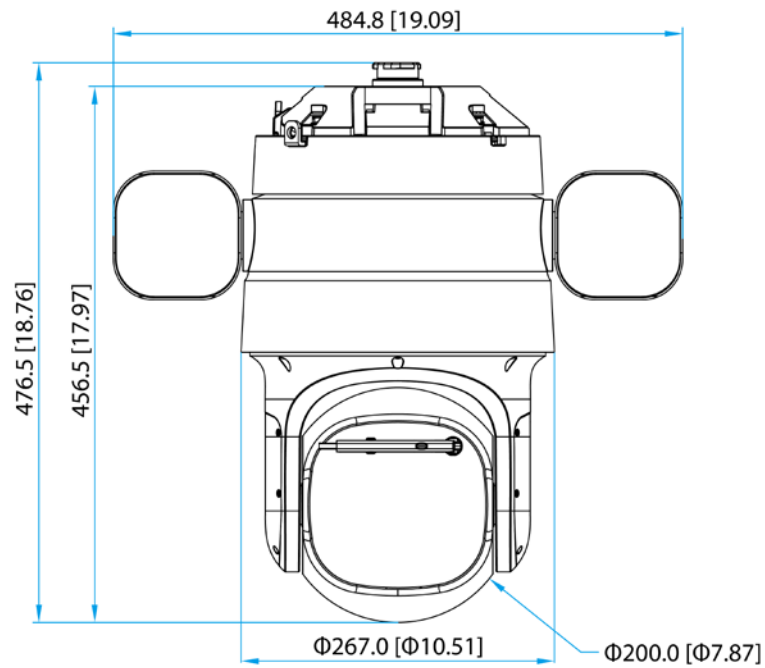


Figure 2-2 Dimensions of quick connector (unit: mm [inch])



2.2 Cables

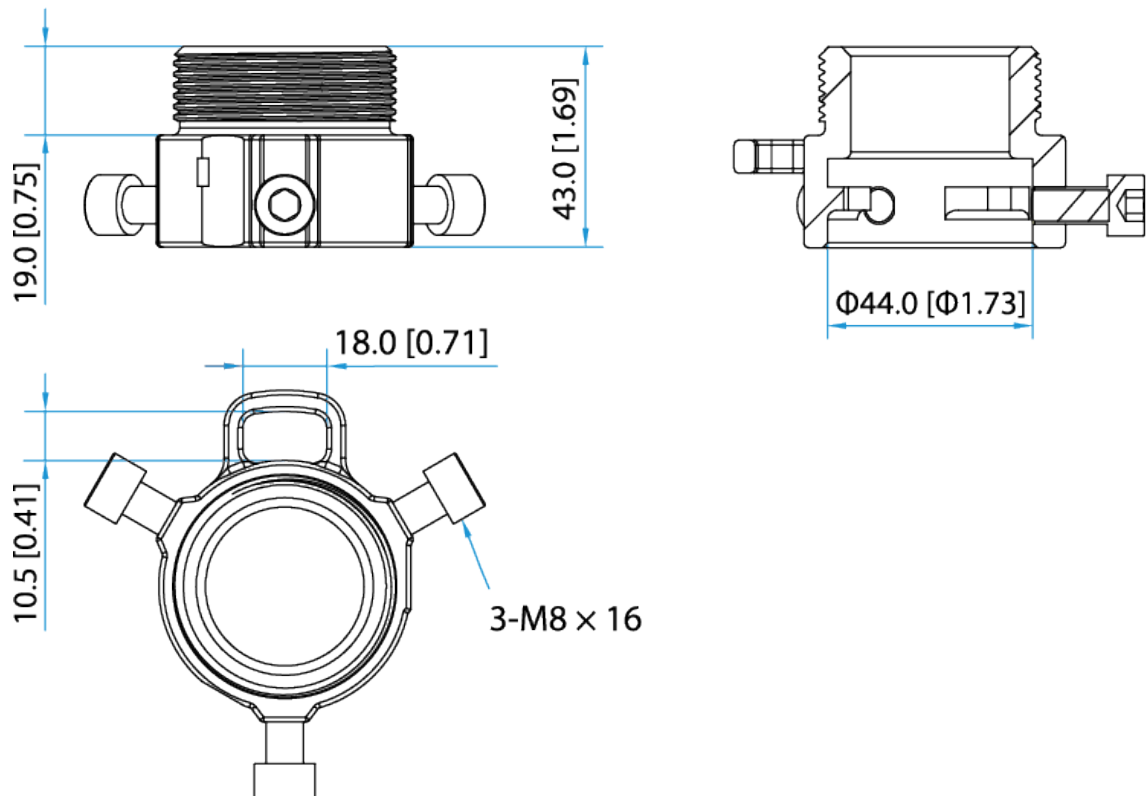

The following figure of the cable is for reference only, and might differ from the actual product.

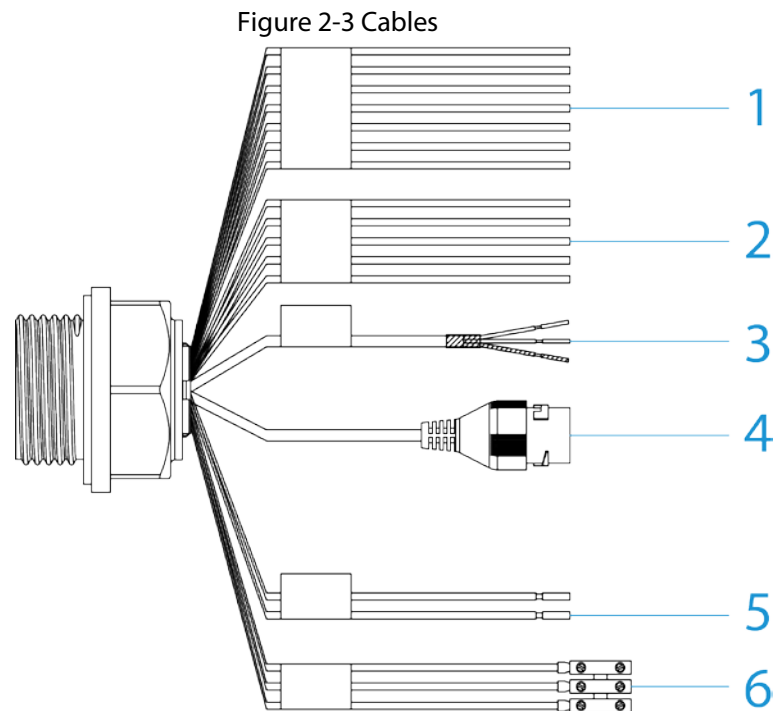


Table 2-1 Port description




No.	Port	Port Name	Connector	Description
1	I/O	I/O port	—	Includes alarm input and output. For details, see Table 2-2.
2		I/O port	—	
3	AUDIO IN	Audio input port	—	Inputs audio signals and receives analog audio signals from devices such as sound pickups.
	AUDIO OUT	Audio output port		Outputs audio signals to external devices such as speakers.
	AUDIO GND	Audio ground	—	Connects to grounding terminal.
4	LAN	Ethernet port	RJ-45	Connects to standard Ethernet cable.
5	RS-485	RS-485 port	—	Controls PTZ.
6	POWER	Power input port	—	Inputs 36 VDC. Make sure to power the Camera according to the label description.  The Camera might sustain damage if the adapter fails to correctly supply power to it according to the label description.

Table 2-2 I/O port description

Name	Port name	Description
I/O port	ALARM_OUT1	Outputs alarm signal to alarm devices.
	ALARM_COM1	 ALARM_OUT1 can only be used together with ALARM_COM1 when connecting to alarm devices.
	ALARM_OUT2	Outputs alarm signal to alarm devices.
	ALARM_COM2	 ALARM_OUT2 can only be used together with ALARM_COM2 when connecting to alarm devices.
	ALARM_IN1–ALARM_IN7	Receives on-off signal from external alarm devices.
	ALARM_GND	Grounding terminal.

3 Basic Configuration



The figures in this manual are for reference only, and might differ from the actual page. For more details, see *Thermal Hybrid Camera_Web Operation Manual*.

3.1 Initializing the Camera



- Initialize the Camera for the first-time use after performing a factory reset.
- To keep the data on the Camera secure, keep the admin password after initialization and regularly change it.
- Make sure the Camera IP address (192.168.1.108 by default) and the computer IP address are on the same network segment.

Step 1 Open IE browser, enter the Camera default IP address in the address bar, and then press the **Enter** key.

Step 2 Set the login password of admin.



- The email address is for password reset.
- We recommend entering the email address in case you forget the password and reset the password.

Step 3 Click **Save** to complete initialization.

3.2 Modifying IP Address

Set the IP address for the network segment to allow the Camera to access the network.

Step 1 Log in to the Camera web page.

Step 2 Select **Setup > Network > TCP/IP**.

Figure 3-1 TCP/IP

TCP/IP

Host Name: TPCDome

Ethernet Card: Wire(Default)

Mode: Static DHCP

MAC Address: [Hexadecimal fields]

IP Version: IPv4

IP Address: [Hexadecimal fields]

Subnet Mask: [Hexadecimal fields]

Default Gateway: [Hexadecimal fields]

Preferred DNS: [Hexadecimal fields]

Alternate DNS: [Hexadecimal fields]

Enable ARP/Ping to set IP address service

Default Refresh Save

Step 3 Configure IP related parameters.

Step 4 Click **Save**.

3.3 Live Video



The web page might differ depending on devices, and the figures in this document are just for reference.

Log in to the web page of the Camera, and then the system will display the web main page.



You will be prompted to install a plug-in for first-time system login. Please download and install the plug-in. The web page will refresh automatically after the plug-in is installed, and then the live video will be displayed.

Figure 3-2 Live video



4 Installing the Camera

4.1 Cable Preparation

Video Cable

- 75 Ω impedance.
- Full cable with copper conductor.
- 95% knitted copper shield.

Table 4-1 Description of video cable

International model	Maximum transmission distance [ft (m)]
RG59/U	750 (229)
RG6/U	1,000 (305)
RG11/U	1,500 (457)

Power Cord

- The power adapter is provided with delivery.
- To extend the power cord you have received, evaluate the distance you want to extend to and select the appropriate cord diameter.
- When the cord diameter is certain, and the voltage loss rate at 36 VDC is below 10%, the recommended maximum transmission distances are as follows.

Table 4-2 Description of power cord

Distance [ft (m)]	Wire Diameter [inch (mm)]	Area [in ² (mm ²)]	Material
65.62 (20)	0.054 (1.38)	0.0023 (1.5)	Solid copper wire
98.43 (30)	0.054 (1.38)	0.0023 (1.5)	
131.23 (40)	0.054 (1.38)	0.0023 (1.5)	
164.04 (50)	0.063 (1.6)	0.0031 (2.0)	
196.85 (60)	0.063 (1.6)	0.0031 (2.0)	
229.66 (70)	0.070 (1.78)	0.0031 (2.0)	

Other Signal Cable

For all other signal cables (such as alarm input and output, RS-485), we recommend you use wires that have a diameter of 0.56 mm (24 AWG) and above as the signal cables.


4.2 Installing Micro SD or SIM Card



- Cut off power before the installation.
- Do not press the reset button during installation. Press and hold the reset button for 10 s and the Camera will be restored to factory default settings. Be cautious with the operation.

Open the Camera cover and you can see the reset button and the Micro-SD card slot on the panel. The reset button is for resetting the system, and the Micro-SD card is for data storage.

Figure 4-1 Reset button and Micro-SD card slot

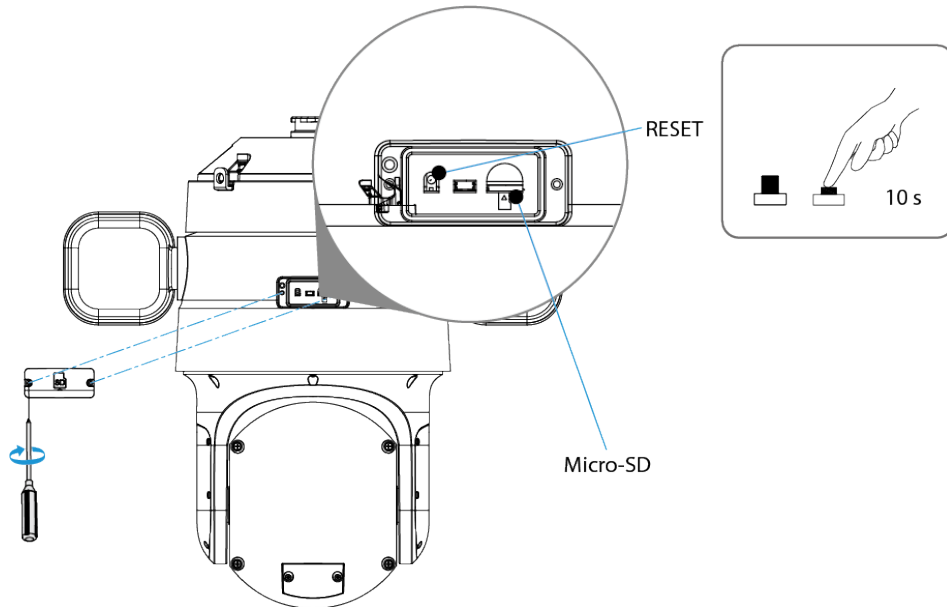

4.3 Installation Preparation

Check Installation Space and Intensity

- Make sure the place where the Camera is to be installed has enough space to hold the Camera and its mounting accessories.
- Make sure the mounting platform can sustain at least 8 times the weight of the Camera and its mounting structural components.

Installation Requirements

- Make sure that the Camera is in good condition before installation. Avoid exposing the Camera to vibrations caused by non-standard transportation, which can result in damage causing second detachment.
- Before installation, make sure the installation environment is clear of liquid sources, otherwise, the Camera might become soaked and damaged. After installation, make sure the Camera can operate without interference.
- Make sure the bracket is sturdy and stable to prevent deformation during long-term use. If the Camera is installed in high towers, we recommend all the screw holes be secured with 2 nuts and spring washers to ensure stability. Otherwise, the device might not be in a horizontal level

caused by the tower shaking. Optional screws and nuts need to be made of stainless steel.

- The tower where the Camera is to be installed needs an installation and maintenance platform for easy installation and maintenance. The tower needs to conform to the current industrial standard, regulations and relevant acceptance criteria.
- Do not aim the lenses at intense radiation sources (such as the sun, molten steel or heat source).
- Installation at height must be carried out by people that are lightning protection qualified. The construction requirements must also comply with lightning protection specifications.
- Lightning-proof protection needs to be set between the power adapter and the Camera.
- We recommend you use a UTP (Unshielded Twisted Pair) that is frost-proof when installing the Camera in a cryogenic environment that is below $-10\text{ }^{\circ}\text{C}$ ($+14\text{ }^{\circ}\text{F}$).
- The cables must not be exposed, and need to be protected with wiring conduit, such as galvanized tube and metal hose.
- Make sure to install the waterproof connector to the cable port. The most frequently-used waterproof method is to secure it with electrical tape and then wrap waterproof tape around the port to avoid water seeping in. These two kinds of tapes must be branded to ensure a long service life and avoid circuitry oxidation and water seeping in.
- After installation, the protection film on the front cover of the Camera lens and the visible light lens need to be revealed.
- Installation and detachment of the Camera needs to be done by professionals. The Camera needs to be protected from collision to avoid damages. The Camera needs to be tied up firmly during lifting in case the Camera turns over.

4.4 Installation Procedure

The Camera supports wall mount and pole mount.




Avoid dropping objects such as parts and tools of the Camera from high altitudes during installation to avoid people getting hurt and the Camera being damaged.

4.4.1 Wall Mount

Step 1 Fix the expansion bolts, and then install the wall mount bracket.


- 1) Drill four holes on the mounting wall, and then insert the expansion bolts.
- 2) Pull out the cables, feed through the wall mount bracket, and then leave 150 mm cable out of the bracket.
- 3) Align the holes and the expansion screws, and then tighten the hexagonal nuts to fix the bracket.

Figure 4-2 Install bracket (unit: mm [inch])

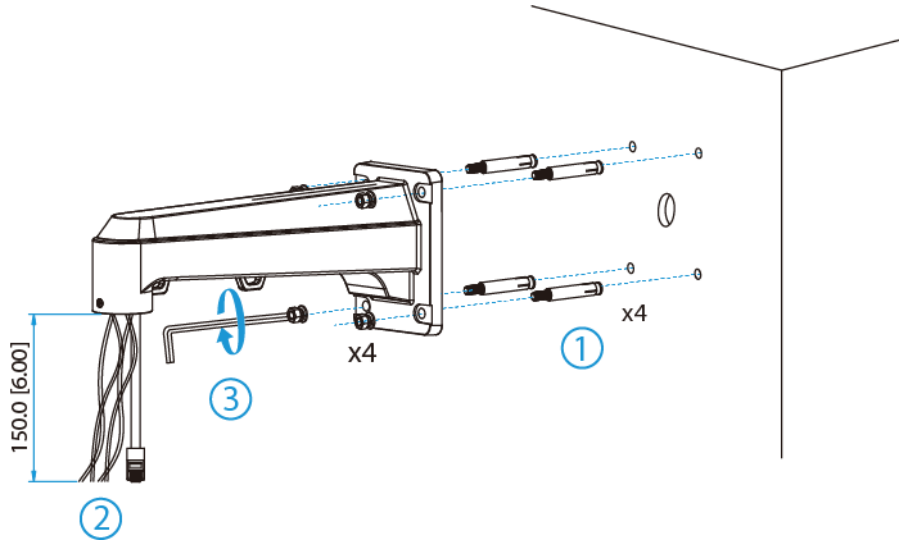

Step 2 Screw the quick connector into the bracket and fix it with stainless steel screws.

Figure 4-3 Screw the quick connector

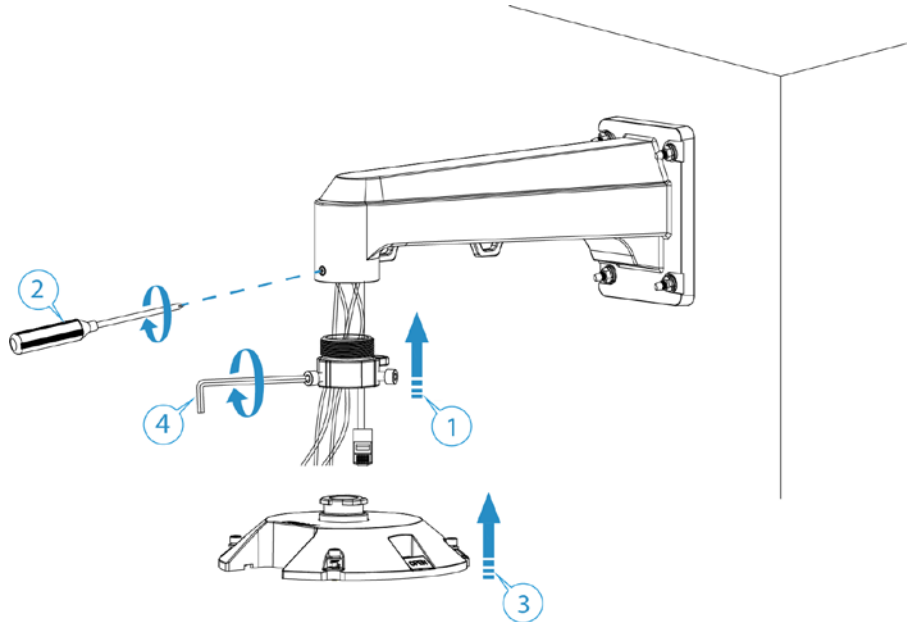


Step 3 Tighten the safety hook.



WARNING


Make sure to tighten the safety hook. Otherwise the Camera might fall due to the unfixed installation.

Figure 4-4 Tighten the safety hook

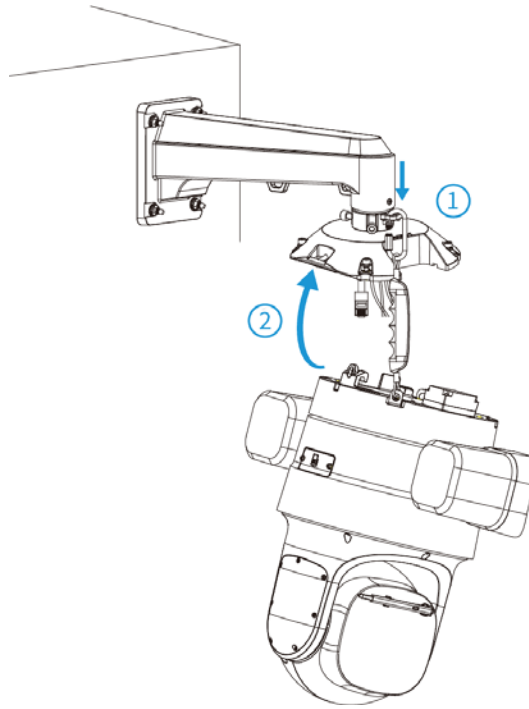


Step 4 Connect the cables.

Figure 4-5 Connect to the cables

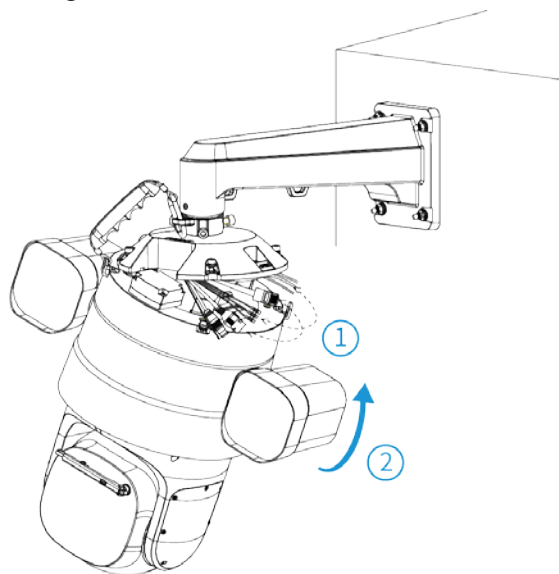

Step 5 Fix the Camera to the bracket with the stainless steel screws.

Figure 4-6 Fix the Camera to the bracket

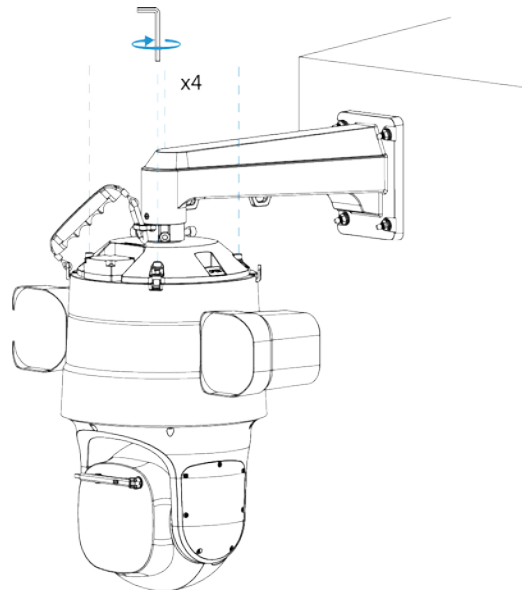

Step 6 Connect external cables of the Camera.

- 1) Connect all the corresponding cables such as the power cord, video cable, RS-485 cable and alarm input and output cables correctly. Use insulation tape to wrap around each connector to ensure waterproof.



- The video port is covered with a heat-shrinkable tube that has a high shrinkage ratio. The tube needs to be heated and shrunk on both sides after the video port is well connected. This is to make sure the video port is moistureproof and waterproof.
 - We recommend adding anti-corrosion measurements to the tail circuit, such as the junction box.
 - We recommend that the grounding hole be grounded to enhance device reliability.
- 2) Configure alarm input and output cables, and refer to "6 Alarm Configuration".
 - 3) Extend the cable according to the actual construction requirements.


4.4.2 Pole Mount



- The Camera must be fixed, and the front-end devices cannot be in movement when operating smart algorithms.
- The height of the Camera must be higher than 3 m. The recommended height is 5 m–15 m.
- The visual angle of the Camera needs to be in a certain depression angle, normally over 20°.
- Avoid the mutual block and adhesion between targets due to horizontal vision to cause false alarms and missed alarms.
- Avoid trees, buildings or other obstacles cutting off the target motion track.


Step 1 Attach the heavy-duty pole mount bracket to the mounting pole with the screws and nuts. The diameter of the mounting pole is 150.0 mm–300.0 mm. The cable tie is for pre-installation aid. Before tightening the screws and nuts, you can fix the front and back end of the heavy-duty pole mount bracket to the pole with the cable tie.

Figure 4-7 Attach the pole mount bracket

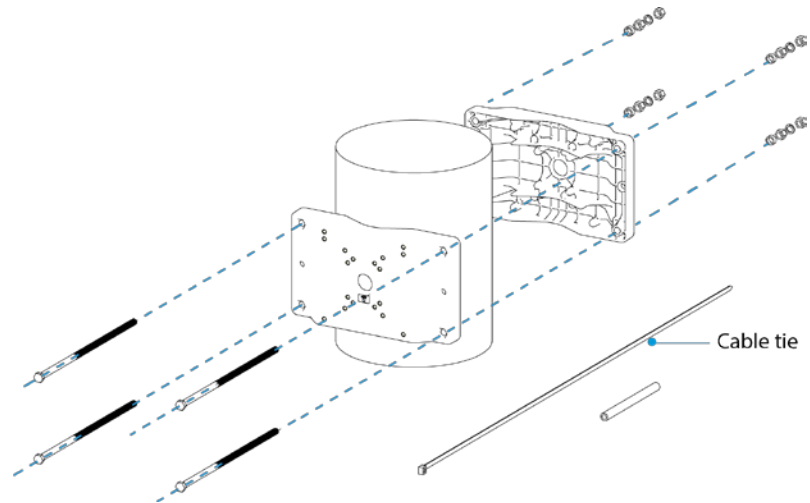

Step 2 Fix the wall mount bracket to the mounting plate of the heavy-duty pole mount bracket.

Figure 4-8 Fix the wall mount bracket

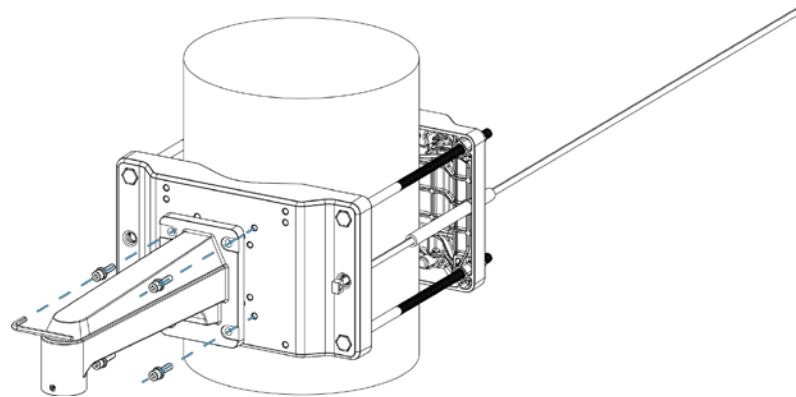

Step 3 Tighten the quick connector and the flange assembly.

- 1) Screw the quick connector into the wall mount bracket, and then tighten it with stainless steel screws.
- 2) Assemble the quick connector and the flange assembly, and then tighten it with stainless steel screws.

Step 4 Tighten the safety hook, and then attach the mounting plate hook to the flange assembly on one side of the Camera.




WARNING
Make sure to install the safety hook, otherwise, the Camera might fall and cause accidents. For details on installing the safety hook, refer to the installation guide of the safety hook in the accessory bag.

Step 5 Connect the cables, lift up the other side of the Camera, and then tighten the mounting plate hook and the flange assembly.

Step 6 Tighten the inner hexagon screws with the L-shaped wrench, fix the Camera to the flange assembly, and then check if the screws are firmly tightened, the safety hook is connected, and the Camera is safely attached.

Figure 4-9 Tighten the screws

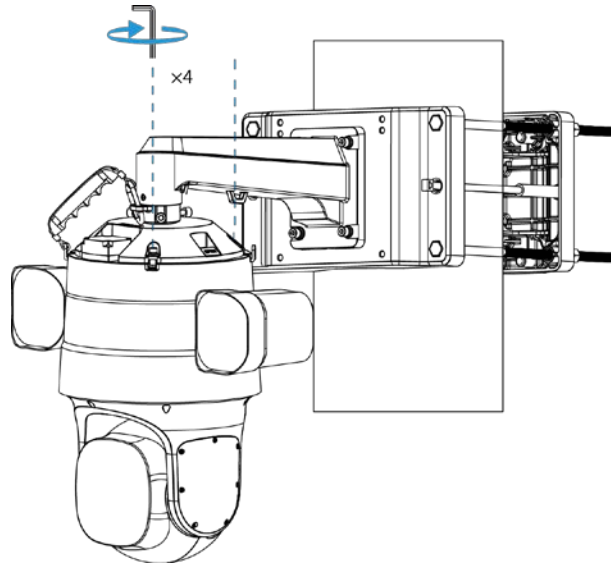


Step 7 For details on connecting the external cables, see "4.4.1 Wall Mount Step 6".

5 Installing Waterproof Connector



Make sure the waterproof connector is used when installing outdoors.

Figure 5-1 Install waterproof connector for network port

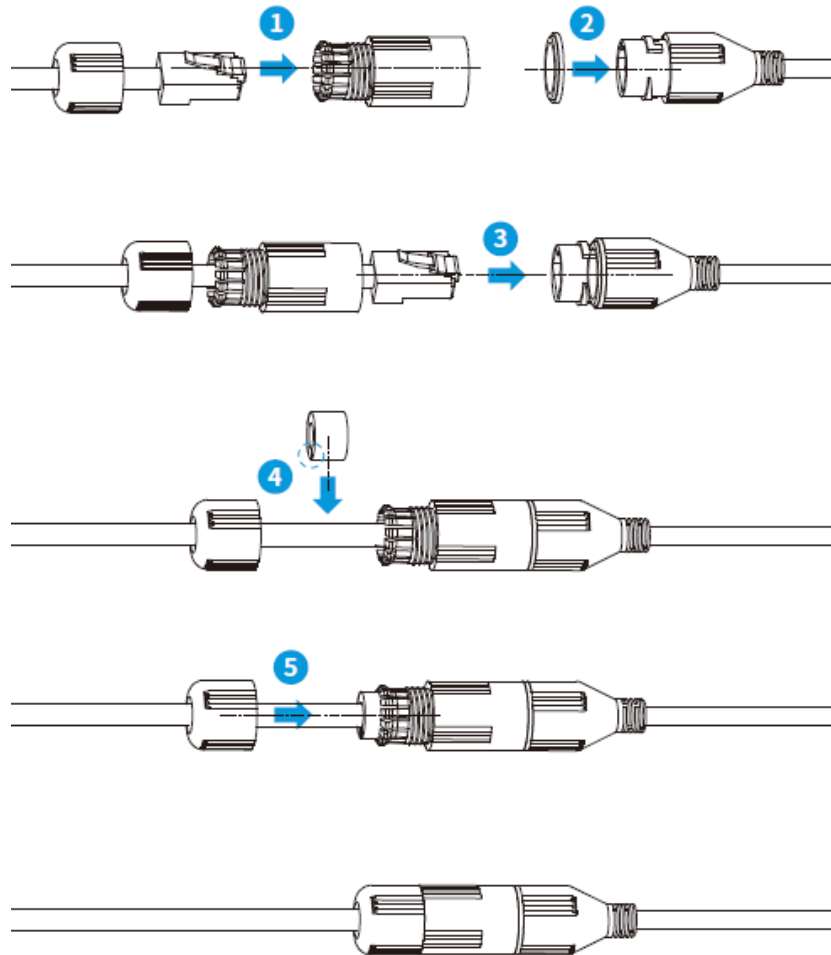

6 Alarm Configuration




- Alarm is not supported by some device models.
- Cut off power before connecting cables.

Step 1 Connect the alarm input device to the alarm input port of I/O cable.

Alarm input: input signal is idle or grounded and the device can collect different states of alarm input port.

- When input signal is 3.3 V or idle, the Camera collects logic "1".
- When input signal is grounded, the Camera collects logic "0".

Figure 6-1 Alarm input

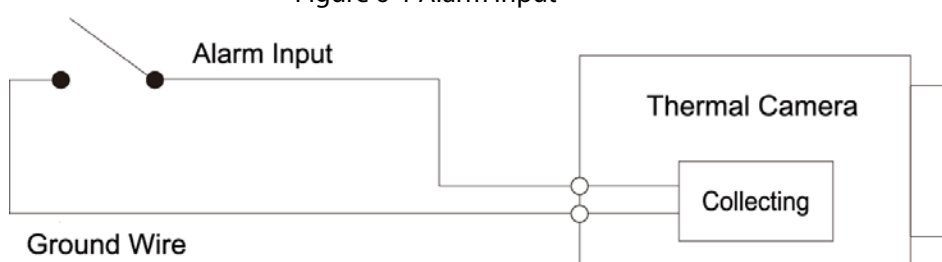


Step 2 Connect alarm output device to alarm output port of I/O cable. Alarm output is a relay switch output. The alarm output port can only be connected to NO alarm device. Alarm output: Port ALARM_OUT and ALARM_COM form a switch to provide alarm output. Normally the switch is on. The switch will be turned off when there is an alarm output.



ALARM_OUT1 can only be used together with ALARM_COM1 while ALARM_OUT2 can only be used together with ALARM_COM2 when connecting to alarm devices.

Figure 6-2 Alarm output

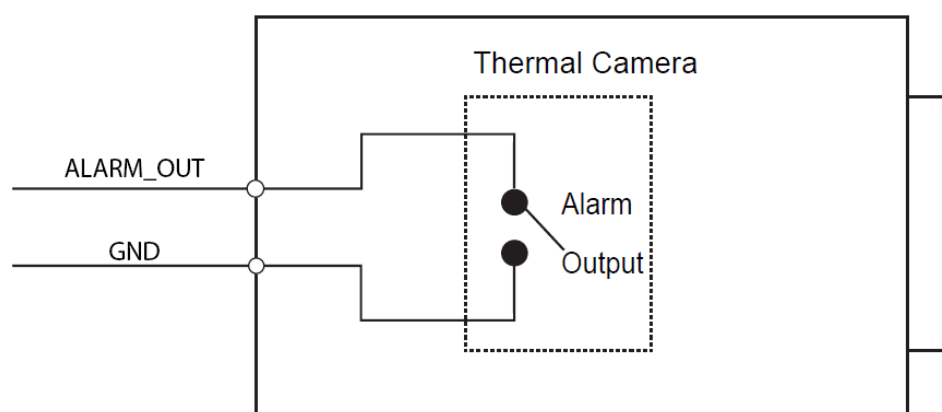

Step 3 Open web page, select **Setting > Event > Alarm**.

Step 4 Configure the settings for alarm input and output in the **Alarm** page, and then click **Save**.

- Alarm input is corresponding to the alarm input port of device I/O cable. It is to set corresponding NO and NC according to the high and low level signal generated by alarm input devices when an alarm is triggered.
- The alarm output corresponds to the alarm output port of device I/O cable.

Figure 6-3 Alarm setting

The screenshot displays the 'Alarm' configuration page. On the left, a dark sidebar lists navigation categories: Camera, Network, Smart Thermal, Event (with sub-items Video Detection, Temperature Alarm, and Alarm), Abnormality, Temperature, Storage, System, and Information. The 'Alarm' option is highlighted in orange. The main content area is titled 'Alarm' and features the following settings:

- Enable
- Relay-in: Alarm1 (dropdown)
- Period: Setting (button)
- Anti-Dither: 0 s (0~100) | Sensor Type: NO (dropdown)
- Record
- Record Delay: 10 s (10~300)
- Relay-out
- Alarm Delay: 10 s (2~300)
- Send Email
- PTZ
- Snapshot


At the bottom of the settings area are three buttons: Default, Refresh, and Save.

Appendix 1 Lightning and Surge Protection

The Camera adopts TVS lightning protection technology. It can effectively prevent damage from various pulse signals below 6000 V, such as a sudden lightning and surge. However, you still need to take necessary precaution measures in accordance with your local electrical safety code when installing the Camera in outdoor environment.

- The distance between the signal transmission cable and high-voltage device (or high-voltage cable) shall be at least 50 m.
- Outdoor cable layout shall go under the penthouse if possible.
- For vast land, use sealing steel tube under the land to implement cable layout and make sure that both ends of the tube are equipotentially grounded. Open floor cable layout is forbidden.
- For vast land, install a 10 KA lightning rod near the Camera's power input port and Ethernet port. For Camera with AC to DC power adapter, install a 10 KA lightning rod near the output port of the adapter.
- For Camera installed on iron tower, if there is a high-performance grounding bar on the tower, connect the Camera grounding wire to the bar. If there is no grounding bar, use multiple copper cable whose cross-sectional area are not less than 16 mm² to connect the Camera grounding wire into the ground.
- Make sure that the Camera is over 3 m away from the top point of tower lightning rod and within protection area against direct lightning.
- In area of strong thunderstorm or near high sensitive voltage (such as near high-voltage transformer substation), install additional high-power thunder protection device or lightning rod.
- The thunder protection and earth grounding of the outdoor devices and cables shall be considered based on the whole thunder protection of the building and conform to your local or industry standards.
- The system shall adopt equal-potential wiring. The grounding devices shall meet anti-jamming requirements and at the same time conforms to your local electrical safety code.
- The grounding devices shall not be connected to N (neutral) line of high voltage power grid or mixed with other wires. When you connect the system to the ground alone, the grounding resistance shall not be more than 4Ω and the cross-sectional area of grounding cable shall be no less than 25 mm².

Appendix Figure 1-1 Install lightning protection

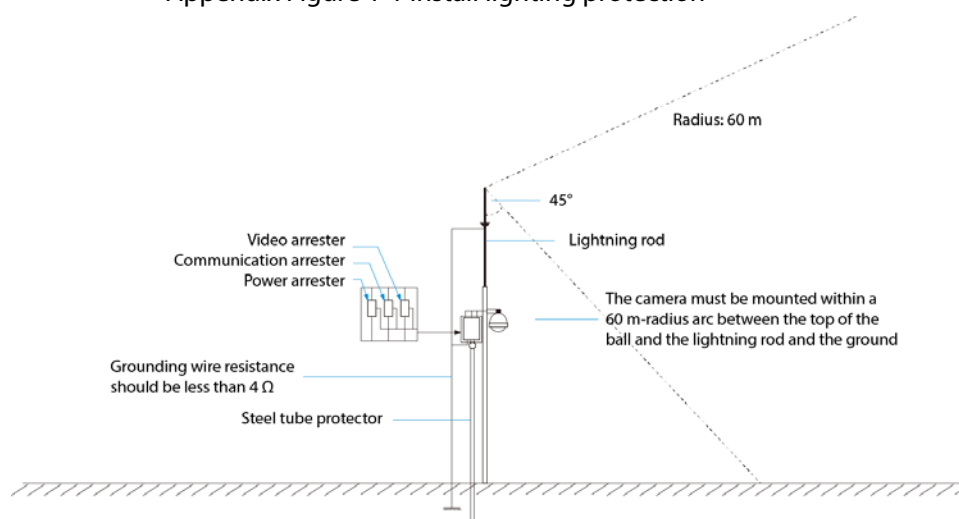

Appendix 2 Cybersecurity Recommendations

Mandatory actions to be taken for basic device network security:

1. Use Strong Passwords

Please refer to the following suggestions to set passwords:

- The length should not be less than 8 characters.
- Include at least two types of characters; character types include upper and lower case letters, numbers and symbols.
- Do not contain the account name or the account name in reverse order.
- Do not use continuous characters, such as 123, abc, etc.
- Do not use overlapped characters, such as 111, aaa, etc.

2. Update Firmware and Client Software in Time

- According to the standard procedure in Tech-industry, we recommend to keep your device (such as NVR, DVR, IP camera, etc.) firmware up-to-date to ensure the system is equipped with the latest security patches and fixes. When the device is connected to the public network, it is recommended to enable the "auto-check for updates" function to obtain timely information of firmware updates released by the manufacturer.
- We suggest that you download and use the latest version of client software.

"Nice to have" recommendations to improve your device network security:

1. Physical Protection

We suggest that you perform physical protection to device, especially storage devices. For example, place the device in a special computer room and cabinet, and implement well-done access control permission and key management to prevent unauthorized personnel from carrying out physical contacts such as damaging hardware, unauthorized connection of removable device (such as USB flash disk, serial port), etc.

2. Change Passwords Regularly

We suggest that you change passwords regularly to reduce the risk of being guessed or cracked.

3. Set and Update Passwords Reset Information Timely

The device supports password reset function. Please set up related information for password reset in time, including the end user's mailbox and password protection questions. If the information changes, please modify it in time. When setting password protection questions, it is suggested not to use those that can be easily guessed.

4. Enable Account Lock

The account lock feature is enabled by default, and we recommend you to keep it on to guarantee the account security. If an attacker attempts to log in with the wrong password several times, the corresponding account and the source IP address will be locked.

5. Change Default HTTP and Other Service Ports

We suggest you to change default HTTP and other service ports into any set of numbers between 1024–65535, reducing the risk of outsiders being able to guess which ports you are using.

6. Enable HTTPS

We suggest you to enable HTTPS, so that you visit Web service through a secure communication channel.

7. MAC Address Binding

We recommend you bind the IP and MAC address of the gateway to the device, thus reducing

the risk of ARP spoofing.

8. **Assign Accounts and Privileges Reasonably**

According to business and management requirements, reasonably add users and assign a minimum set of permissions to them.

9. **Disable Unnecessary Services and Choose Secure Modes**

If not needed, it is recommended to turn off some services such as SNMP, SMTP, UPnP, etc., to reduce risks.

If necessary, it is highly recommended that you use safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption passwords and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up strong passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up strong passwords.

10. **Audio and Video Encrypted Transmission**

If your audio and video data contents are very important or sensitive, we recommend that you use encrypted transmission function, to reduce the risk of audio and video data being stolen during transmission.

Reminder: encrypted transmission will cause some loss in transmission efficiency.

11. **Secure Auditing**

- Check online users: we suggest that you check online users regularly to see if the device is logged in without authorization.
- Check device log: By viewing the logs, you can know the IP addresses that were used to log in to your devices and their key operations.

12. **Network Log**

Due to the limited storage capacity of the device, the stored log is limited. If you need to save the log for a long time, it is recommended that you enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

13. **Construct a Safe Network Environment**

In order to better ensure the safety of device and reduce potential cyber risks, we recommend:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network.
- The network should be partitioned and isolated according to the actual network needs. If there are no communication requirements between two sub networks, it is suggested to use VLAN, network GAP and other technologies to partition the network, so as to achieve the network isolation effect.
- Establish the 802.1x access authentication system to reduce the risk of unauthorized access to private networks.
- Enable IP/MAC address filtering function to limit the range of hosts allowed to access the device.