

H3C WA6320H Access Point Installation Guide

Copyright © 2020, New H3C Technologies Co., Ltd. and its licensors

All rights reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of New H3C Technologies Co., Ltd.

Trademarks

Except for the trademarks of New H3C Technologies Co., Ltd., any trademarks that may be mentioned in this document are the property of their respective owners.

Notice

The information in this document is subject to change without notice. All contents in this document, including statements, information, and recommendations, are believed to be accurate, but they are presented without warranty of any kind, express or implied. H3C shall not be liable for technical or editorial errors or omissions contained herein.

Environmental protection

This product has been designed to comply with the environmental protection requirements. The storage, use, and disposal of this product must meet the applicable national laws and regulations.

Preface

This installation guide describes the installation procedure for the H3C WA6320H access point.

This preface includes the following topics about the documentation:

- [Audience](#).
- [Conventions](#).
- [Documentation feedback](#).

Audience

This documentation is intended for:

- Network planners.
- Field technical support and servicing engineers.
- Network administrators working with the WA6320H access point.

Conventions

The following information describes the conventions used in the documentation.





Command conventions

Convention	Description
Boldface	Bold text represents commands and keywords that you enter literally as shown.
<i>Italic</i>	<i>Italic</i> text represents arguments that you replace with actual values.
[]	Square brackets enclose syntax choices (keywords or arguments) that are optional.
{ x y ... }	Braces enclose a set of required syntax choices separated by vertical bars, from which you select one.
[x y ...]	Square brackets enclose a set of optional syntax choices separated by vertical bars, from which you select one or none.
{ x y ... }*	Asterisk marked braces enclose a set of required syntax choices separated by vertical bars, from which you select a minimum of one.
[x y ...]*	Asterisk marked square brackets enclose optional syntax choices separated by vertical bars, from which you select one choice, multiple choices, or none.
&<1-n>	The argument or keyword and argument combination before the ampersand (&) sign can be entered 1 to n times.
#	A line that starts with a pound (#) sign is comments.













GUI conventions

Convention	Description
Boldface	Window names, button names, field names, and menu items are in Boldface. For example, the New User window opens; click OK .
>	Multi-level menus are separated by angle brackets. For example, File > Create > Folder .

Symbols

Convention	Description
 WARNING!	An alert that calls attention to important information that if not understood or followed can result in personal injury.
 CAUTION:	An alert that calls attention to important information that if not understood or followed can result in data loss, data corruption, or damage to hardware or software.
 IMPORTANT:	An alert that calls attention to essential information.
NOTE:	An alert that contains additional or supplementary information.
 TIP:	An alert that provides helpful information.

Network topology icons

Convention	Description
	Represents a generic network device, such as a router, switch, or firewall.
	Represents a routing-capable device, such as a router or Layer 3 switch.
	Represents a generic switch, such as a Layer 2 or Layer 3 switch, or a router that supports Layer 2 forwarding and other Layer 2 features.
	Represents an access controller, a unified wired-WLAN module, or the access controller engine on a unified wired-WLAN switch.
	Represents an access point.
	Represents a wireless terminator unit.
	Represents a wireless terminator.
	Represents a mesh access point.
	Represents omnidirectional signals.
	Represents directional signals.
	Represents a security product, such as a firewall, UTM, multiservice security gateway, or load balancing device.
	Represents a security module, such as a firewall, load balancing, NetStream, SSL VPN, IPS, or ACG module.

Examples provided in this document

Examples in this document might use devices that differ from your device in hardware model, configuration, or software version. It is normal that the port numbers, sample output, screenshots, and other information in the examples differ from what you have on your device.

Documentation feedback

You can e-mail your comments about product documentation to info@h3c.com.

We appreciate your comments.

Contents

1	Preparing for installation	1-1
	Safety recommendations	1-1
	Site preparation	1-1
	Installation accessories	1-1
	Installation tools	1-2
2	Installing the AP	2-1
	Installation flowchart	2-1
	Pre-installation tasks	2-1
	Mounting the AP	2-1
	Powering the AP	2-3
	Connecting a PoE power source	2-3
	Connecting a local power source	2-3
	Check after power-on	2-4
	Connecting the AP to the network	2-4
3	Appendix A Technical specifications	3-1
4	Appendix B Ports and LEDs	4-1
	Ports	4-1
	LEDs	4-3

1 Preparing for installation

Safety recommendations

⚠ WARNING!

Only professional technical personnel can install and remove the AP and its accessories. You must read all safety instructions carefully before working with the AP.

To avoid possible bodily injury and equipment damage, read the following safety recommendations before installing the AP. Note that the recommendations do not cover every possible hazardous condition.

- To avoid bodily injury and device damage, take adequate safety measures.
- Place the AP in a dry and flat location and take anti-slip measures.
- Keep the AP clean and dust-free.
- Do not place the AP in a moist area and avoid liquid intrusion.
- Keep the AP and installation tools away from walkways.

Site preparation

Before installing the AP, examine the installation site and ensure that the AP will operate in a favorable environment. Make sure the temperature and humidity at the installation site meet the requirements in [Table 1-1](#).

Table 1-1 Temperature and humidity requirements

Item	Specification
Operating temperature	0°C to 40°C (32°F to 104°F)
Storage temperature	-40°C to +70°C (-40°F to +158°F)
Operating humidity	5% RH to 95% RH, noncondensing

Installation accessories

Figure 1-1 Accessories provided with the AP



M3 x 4 security screw



M4 x 25 screw



Mounting bracket

Installation tools

When installing the AP, you might need the following tools. Prepare the installation tools yourself as required.

Figure 1-2 Installation tools



Phillips screwdriver



Needle-nose screwdriver



Wire stripper



Wire crimper




Torx screwdriver

2 Installing the AP

Installation flowchart

Figure 2-1 Installation flowchart

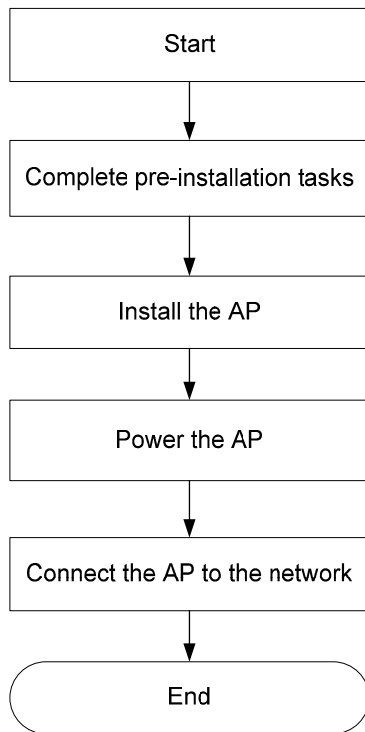

Pre-installation tasks


Before installing the AP, perform the following tasks:

- Power on the AP and connect the AP to the network. Examine the LEDs to verify that the AP is operating correctly. For information about the LEDs, see "[LEDs](#)."
- Record the MAC address and serial number of the AP for future use.

Mounting the AP

1. As shown in [Figure 2-2](#), use M4 screws to attach the mounting bracket to an electrical outlet box.


Figure 2-2 Attaching the mounting bracket to an electrical outlet box

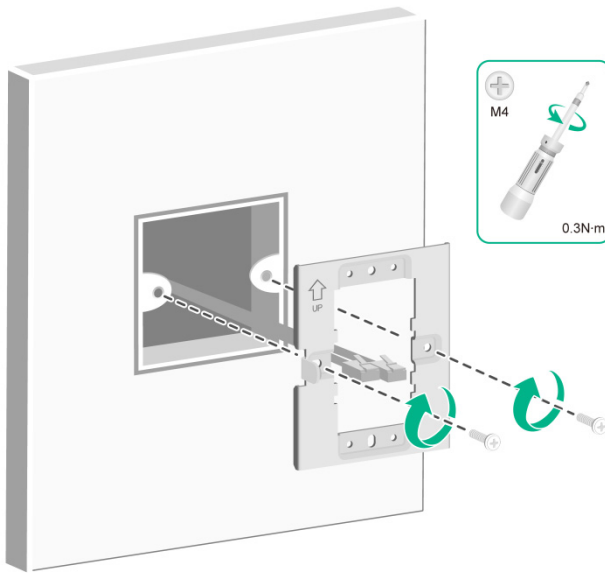

2. As shown in [Figure 2-3](#), connect cables to the pass-through port and uplink/PoE in port on the rear of the AP.


The pass-through ports on the rear and bottom of the AP are standard RJ-45 ports. You can connect phone cables or Ethernet cables to the pass-through ports as needed.

Figure 2-3 Connecting a cable to the uplink/PoE in port

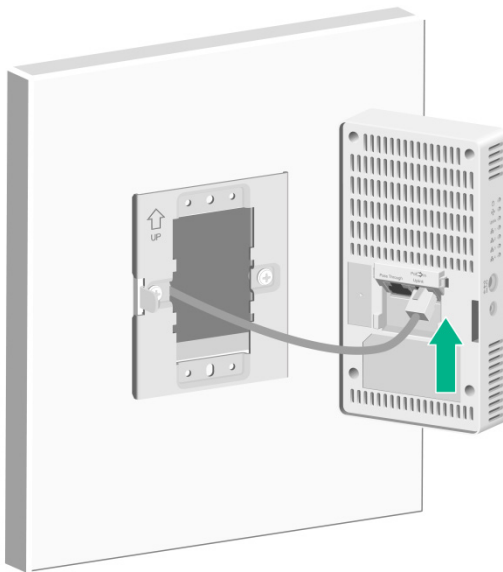

3. Secure the AP to the mounting bracket, as shown in [Figure 2-4](#).
 - a. Align the mounting peg on the mounting bracket with the installation slot in the rear of the AP and insert the peg into the slot.
 - b. Slide down the AP so that it sits securely on the peg.
 - c. Fasten the M3 × 4 screw on the side panel of the AP.

Figure 2-4 Securing the AP to the mounting bracket

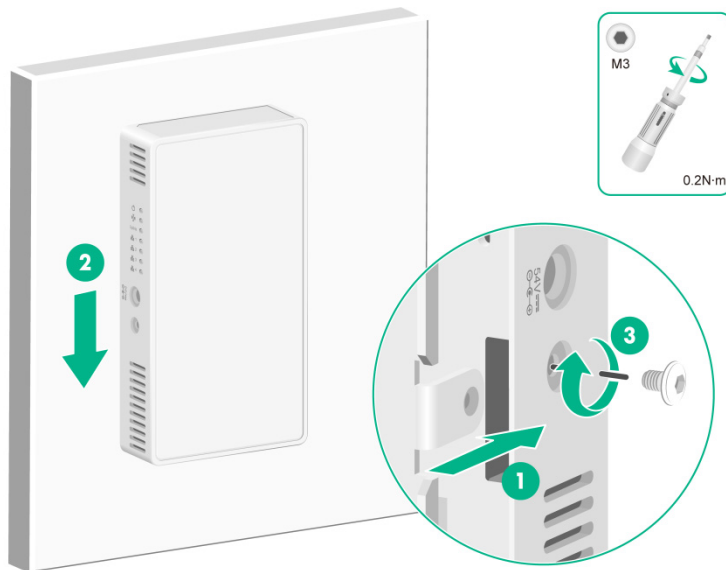


Powering the AP

You can supply power to the AP by using a local power source or through 802.3af/802.at PoE as required. Before powering the AP, make sure the local power source or the power sourcing equipment (PSE) is reliably grounded.

Connecting a PoE power source

To power the AP through PoE, use an Ethernet cable to connect an Ethernet port on a PoE switch to the uplink/PoE in port on the AP.

Figure 2-5 Powering the AP through PoE

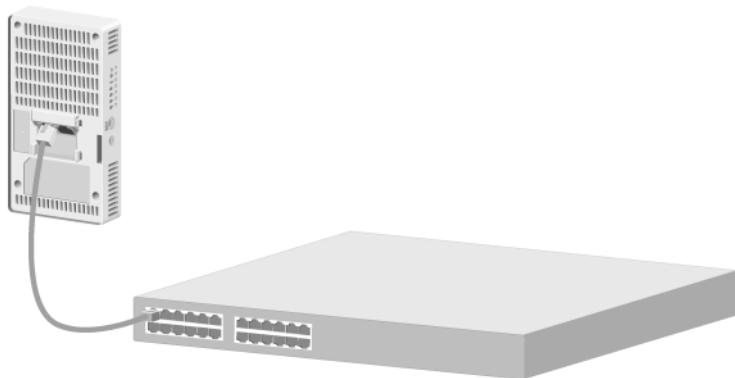

Connecting a local power source

You can use an AC/DC power adapter to connect the AP to a local power source. No power adapter is provided with the AP. Prepare one yourself as required. [Table 2-1](#) describes the power adapter specifications.

Table 2-1 Power adapter specifications



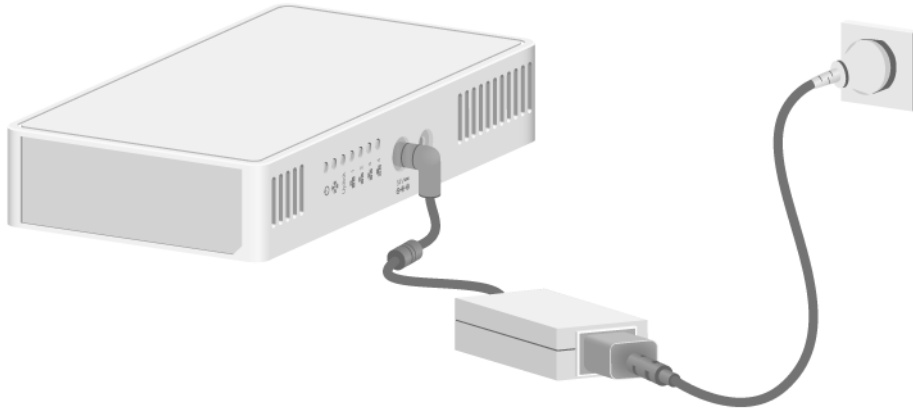
Item	Specification
Input	100 VAC to 240 VAC
Output	+54 VDC  at 0.74 A 

Figure 2-6 Using a power adapter to connect the AP to a local power source



Check after power-on

Examine the LEDs on the AP after you power on it to verify that the AP is operating correctly. For more information about the LEDs, see "[LEDs](#)."

Connecting the AP to the network

All AP settings are configured on the AC. To verify network connectivity of the AP, execute the `display wlan ap all` command on the AC. If the AP status is **R/M**, the AP has been connected to the network.

```
<AC> display wlan ap all
Total number of APs: 1
Total number of connected APs: 1
Total number of connected manual APs: 1
Total number of connected auto APs: 0
Total number of connected common APs: 1
Total number of connected WTUs: 0
Total number of inside APs: 0
Maximum supported APs: 3072
Remaining APs: 3071
Total AP licenses: 128
Remaining AP licenses: 127
```

AP information

```
State : I = Idle,      J = Join,      JA = JoinAck,    IL = ImageLoad
        C = Config,   DC = DataCheck, R = Run  M = Master, B = Backup
```

AP name	AP ID	State	Model	Serial ID
apl	1	R/M	WA6320H	219801A2978199E00001

3 Appendix A Technical specifications

Table 3-1 Technical specifications

Item	Specification
Dimensions (H × W × D)	30 × 160 × 86 mm (1.18 × 6.30 × 3.39 in)
Weight	0.25 kg (0.55 lb)
Antenna	Internal antennas
Power consumption	<ul style="list-style-type: none">• ≤ 12.95 W without a USB device attached• ≤ 15.45 W without a USB device attached
IEEE standards	IEEE802.11a/b/g/n/ac/ax

4 Appendix B Ports and LEDs


Ports

The AP provides the following ports:


- One console port
- Four 10/100/1000M Ethernet copper ports
- One power port
- Two pass-through ports
- One uplink/PoE in port
- One USB port

It provides also a reset button (RST) and a security screw hole.


Figure 4-1 Ports on the AP

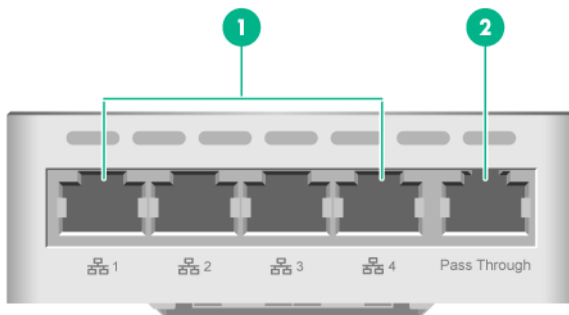


(1) 10/100/1000M Ethernet copper ports (2) Pass-through port

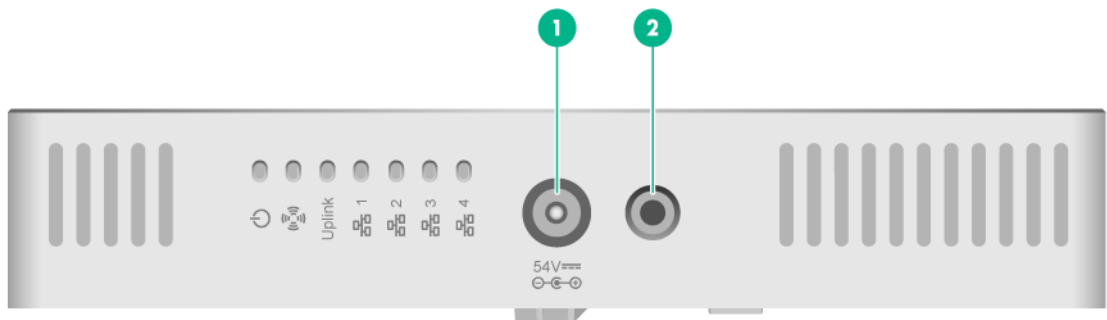

(1) Power port (2) Security screw hole

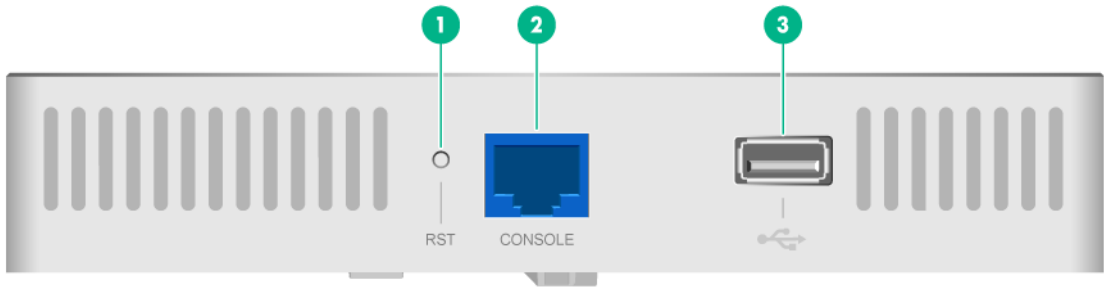

(1) Reset button (RST) (2) Console port (3) USB port

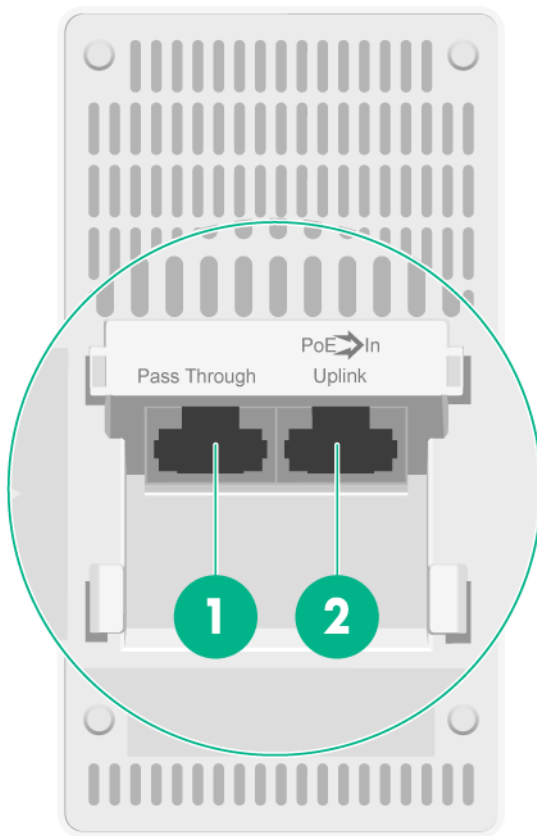

(1) Pass-through port (2) Uplink/PoE in port


Table 4-1 Port descriptions

Port	Standards and protocols	Description
Console port	RS/EIA-232	Used by technical personnel only for device configuration and management.
10/100/1000M Ethernet copper port (1 to 4)	<ul style="list-style-type: none"> IEEE802.3 IEEE802.3u 	Represented by interface number GE1/0/2 to GE1/0/5 in the MAP file and GigabitEthernet 2 to GigabitEthernet 5 on the AC.

Port	Standards and protocols	Description
Uplink/PoE in port (10/100/1000M Ethernet copper port)	<ul style="list-style-type: none"> IEEE802.3 IEEE802.3u IEEE802.3af IEEE802.3at 	Used for connecting the AP to an uplink device for Internet or MAN access. It can also receive PoE power from the uplink device. It is represented by interface number GE1/0/1 in the MAP file and GigabitEthernet 1 on the AC.
Power port (54 V)	N/A	Used for receiving +54 VDC power from a local power source.
Pass-through port (2 in total)	<ul style="list-style-type: none"> IEEE802.3 IEEE802.3u 	Use for connecting a phone cable or RJ-45 cable.
USB port	USB 2.0	Used for charging as well as data reading or writing.
Reset button	N/A	<ul style="list-style-type: none"> To reset the AP, press and hold the button for no more than 5 seconds. To restore the factory default, press and hold the button for more than 5 seconds.

LEDs

Figure 4-2 LEDs on the AP

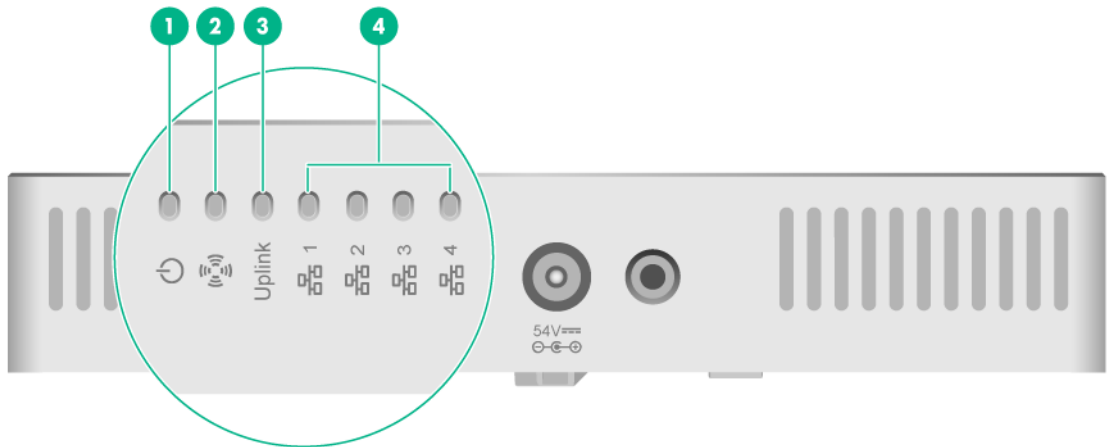

(1) Power status LED	(2) Radio status LED
(3) Uplink port status LED	(4) Ethernet port status LEDs

Table 4-2 LED descriptions

LED	Status	Description
Power status LED	Off	No power is present or the LED has been disabled.
	Steady yellow	The device is initializing or an initialization exception has occurred.
	Flashing yellow at 1 Hz	No radio cards have been detected.
	Flashing yellow at 2 Hz	The Ethernet interfaces are down and no mesh links are established.
	Steady green	The AP has started up and registered to an AC, and is in standby state.
	Flashing green at 0.5 Hz	The AP has started up but has not registered to any AC.
	Flashing green at 2 Hz	The AP is upgrading the image.
Radio status LED	Off	The radios do not have associated clients, or the LED has been turned off from the CLI.
	Flashing green at 1 Hz	Only the 2.4G radio has associated clients.
	Flashing yellow at 1 Hz	Only the 5G radio has associated clients.
	Alternating between green and blue at 1 Hz	Both the 2.4G and 5G radios have associated clients.
Uplink port status LED	Off	No power is present.
	Steady yellow	The port has been auto-negotiated to operate at 10/100 Mbps.
	Flashing yellow	The port is sending or receiving data at 10/100 Mbps.
	Steady green	The port has been auto-negotiated to operate at 1000 Mbps.
	Flashing green	The port is sending or receiving data at 1000 Mbps.
Ethernet port status LED	Off	No link is present on the port.
	Steady yellow	The port has been auto-negotiated to operate at 10/100 Mbps.
	Flashing yellow	The port is sending or receiving data at 10/100 Mbps.
	Steady green	The port has been auto-negotiated to operate at 1000 Mbps.
	Flashing green	The port is sending or receiving data at 1000 Mbps.