



# Narrow Wave Tablet Radar

## User's Manual



# Foreword

## General






This manual introduces the functions and operations of the narrow wave tablet radar (hereinafter referred to as the "Radar").

## Model

DH-ITARD-024SA-ST

## Safety Instructions

The following categorized signal words with defined meaning might appear in the manual.

Signal Words	Meaning
 DANGER	Indicates a high potential hazard which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a medium or low potential hazard which, if not avoided, could result in slight or moderate injury.
 CAUTION	Indicates a potential risk which, if not avoided, could result in property damage, data loss, lower performance, or unpredictable result.
 TIPS	Provides methods to help you solve a problem or save you time.
 NOTE	Provides additional information as the emphasis and supplement to the text.

## Revision History

Version	Revision Content	Release Time
V1.0.2	Update Chapter 4 & 5.	September 2020
V1.0.1	Update partial parameters	December 2019
V1.0.0	First release	May 2018

## About the Manual

- The manual is for reference only. If there is inconsistency between the manual and the actual product, the actual product shall prevail.
- We are not liable for any loss caused by the operations that do not comply with the manual.
- The manual would be updated according to the latest laws and regulations of related regions.

For detailed information, see the paper manual, CD-ROM, QR code or our official website. If there is inconsistency between paper manual and the electronic version, the electronic version shall prevail.

- All the designs and software are subject to change without prior written notice. The product updates might cause some differences between the actual product and the manual. Please contact the customer service for the latest program and supplementary documentation.
- There still might be deviation in technical data, functions and operations description, or errors in print. If there is any doubt or dispute, please refer to our final explanation.
- Upgrade the reader software or try other mainstream reader software if the manual (in PDF format) cannot be opened.
- All trademarks, registered trademarks and the company names in the manual are the properties of their respective owners.
- Please visit our website, contact the supplier or customer service if there is any problem occurred when using the device.
- If there is any uncertainty or controversy, please refer to our final explanation.

# Important Safeguards and Warnings

This chapter introduces the contents covering proper handling of the Radar, hazard prevention, and prevention of property damage. Read these contents carefully before using the Radar, comply with them when using, and keep the manual well for future reference.



- Pay attention to personnel safety when installing the Radar at intersections or certain road sections.
- Non-professionals are forbidden to disassemble and install the Radar.
- Before powering on the Radar, check all the power connections to prevent short circuit.
- Properly ground the Radar.
- Securely install the Radar to reduce the impact of vibration on the Radar.
- The cables must meet the requirements of shielding, insulation, and moisture resistance.

## Power Source Requirements



- Use high-quality DC power supply that meets the voltage requirements to avoid crosstalk from other devices.
  - Strictly comply with the local electric safety standards.
  - Make sure that the power supply is correct before operating the Radar.
  - Use power supply that meets SELV (safety extra low voltage) requirements, and supply power with rated voltage that conforms to Limited Power Source in IEC60950-1. For specific power supply requirements, please refer to device labels.
  - Install easy-to-use device for power off before installing cables, which is for emergent power off when necessary.
  - Prevent the line cord from being trampled or pressed, especially the plug, power socket and the junction.
- **Application Environment Requirements**
    - Make sure that there are no obstructions in the front of the Radar.
    - Do not hot swap the serial port.
    - Do not impact the Radar. Prevent the Radar from falling down.
    - Do not aim the Radar at strong light (such as lamplight, sunlight) for focusing.
    - Transport, use and store the Radar under the allowed humidity and temperature conditions.
    - Prevent any liquid from flowing into the Radar.
    - Do not block the ventilation near the Radar.
    - Do not press, vibrate or soak the Radar during transportation, storage and installation.
    - Pack the Radar with packaging materials provided by its manufacturer or materials with the same quality before transporting it.

## Maintenance Requirements

 **WARNING**

- Use accessories suggested by the manufacturer, and install and maintain the Radar by professionals.
- Do not provide two or more power supply modes; otherwise, the Radar might be damaged.

# Table of Contents

<b>Foreword</b> .....	<b>I</b>
<b>Important Safeguards and Warnings</b> .....	<b>III</b>
<b>1 Product Introduction</b> .....	<b>1</b>
1.1 Overview .....	1
1.2 Features .....	1
<b>2 Device Structure</b> .....	<b>2</b>
2.1 Dimensions.....	2
2.2 Structure.....	2
2.3 Cable .....	4
<b>3 Installation</b> .....	<b>5</b>
3.1 Fixing the Radar to Brackets.....	5
3.2 Installing the Radar over Lane.....	6
<b>4 Client Operation</b> .....	<b>8</b>
4.1 Connecting Radar .....	8
4.2 Installing Client .....	8
4.3 Configuring Client .....	10
4.3.1 Device Connection .....	10
4.3.2 Speed Measurement Status.....	10
4.3.3 Parameter Settings.....	11
<b>5 Updating Device</b> .....	<b>13</b>
5.1 Updating Program .....	13
5.2 Updating WEB .....	14
<b>6 FAQ</b> .....	<b>15</b>
<b>Appendix 1 Cybersecurity Recommendations</b> .....	<b>16</b>

# 1 Product Introduction

## 1.1 Overview

The narrow wave tablet radar is a narrow beam radar with planar antenna system. It is specifically designed to detect moving vehicles to meet modern traffic management challenges.

The product uses modern microwave radar technology and high-speed digital signal processing technology for precise positioning and accurate speed measurement. The Radar can be applied to a wide range of complex road environments such as tunnel entrance and highway interchanges, providing real-time traffic information and forensic evidence for traffic speed violations.

## 1.2 Features

- Adopts 24 GHz MMIC technology, light-weighted and efficient.
- High-precision capture at fixed position. Position error within  $\pm 1$  m (3.28 ft).
- High-gain and low-sidelobe microstrip antenna design helps effectively avoid echo interference of adjacent lanes.
- Fast response ensures high capture rate and real-time signal processing.
- Advanced radar signal processing and real-time data processing technologies.
- Adopts new algorithm for enhanced location stability and prolonged work sustainability.
- Ideal for flexible and extensive applications.
- Low microwave radiation and power consumption, long service life, and high stability and reliability.

## 2 Device Structure

### 2.1 Dimensions

Figure 2-1 Front view (mm (inch))


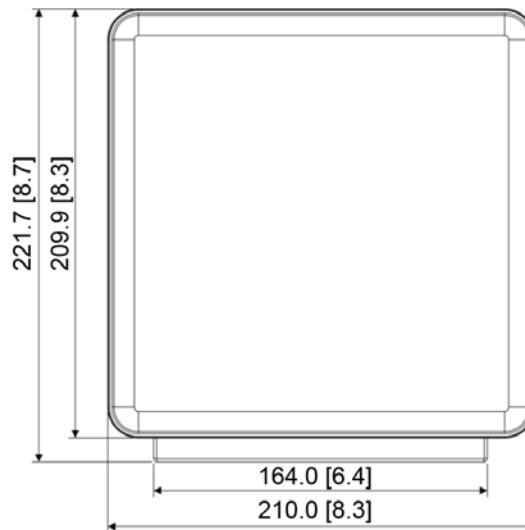


Figure 2-2 Side view (mm (inch))

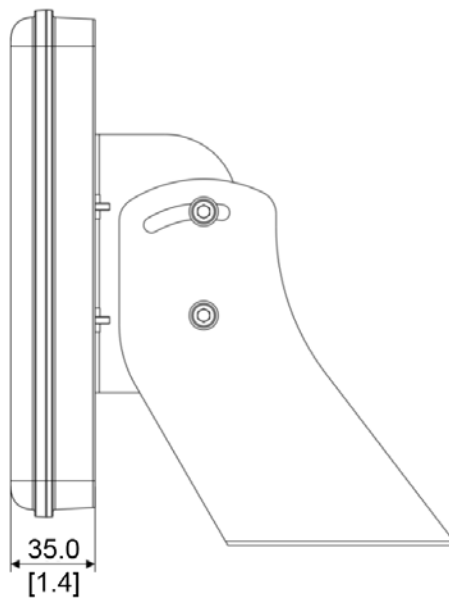

### 2.2 Structure

The device structure relates to the Radar and the bracket. See c) and d).



Figure 2-3 Radar structure

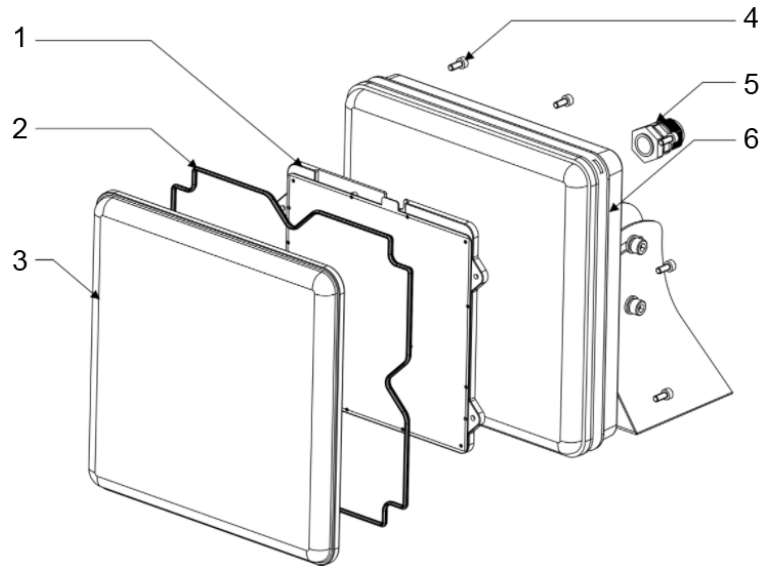


Table 2-1 Radar structure

No.	Description	No.	Description
1	Antenna	4	Set screw
2	Sealing washer	5	PG connector
3	Front cover	6	Rear cover

Figure 2-4 Bracket structure

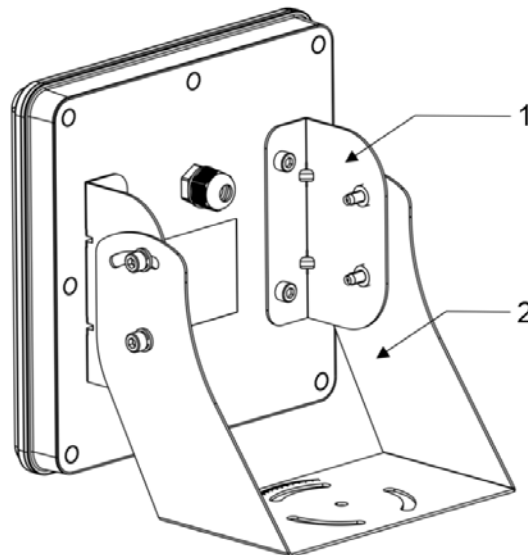


Table 2-2 Bracket structure

No.	Description	No.	Description
1	Bracket 1	2	Bracket 2

## 2.3 Cable

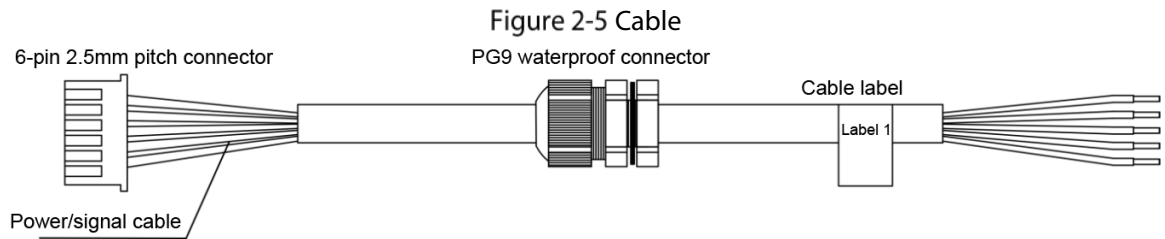


Table 2-3 Description of 6-pin 2.5mm pitch connector

Pin	Name	Description
1	12V DC (black)	GND pin for radar power supply.
2	12V DC (red)	Pin for 12V radar power supply.
3	TXD (green)	TX pin for radar RS-232 communication, baud rate 9600, connects to R1, R2 and R3 ports of camera.
4	RXD (yellow)	RX pin for radar RS-232 communication, connects to T1, T2 and T3 ports of camera.
5	GND (brown)	GND pin for radar RS-232 communication, connects to GND port of camera.
6	Reserved	Reserved.


## 3 Installation

### 3.1 Fixing the Radar to Brackets

The brackets help fix the Radar and adjust the angle of the Radar.


Step 1 Fix bracket 1 to the Radar with four M6 × 8 hex socket cap screws.

Figure 3-1 Fix bracket 1

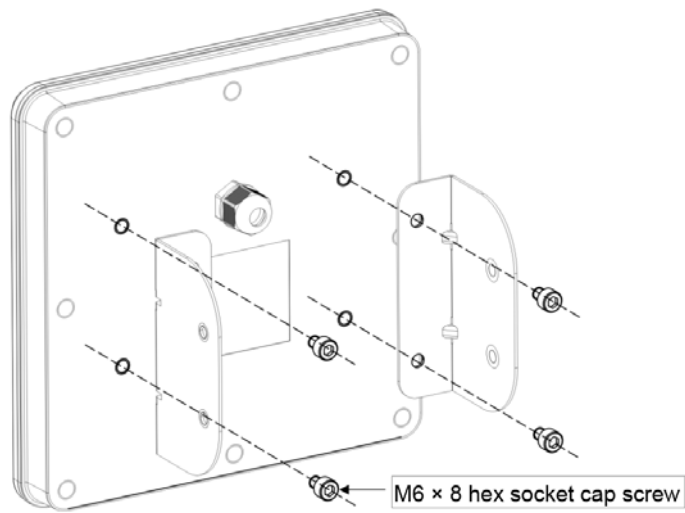

Step 2 Fix bracket 2 to bracket 1 with four M6 × 20 flat spring screws.

Figure 3-2 Fix bracket 2

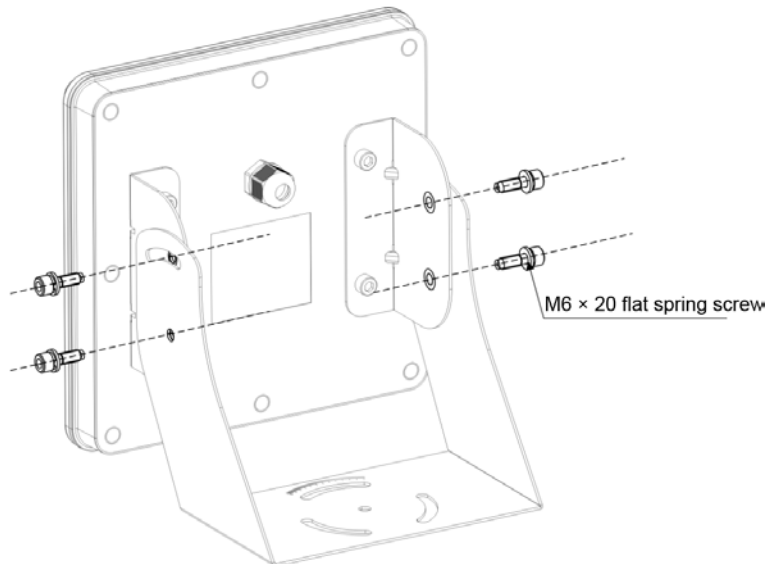


## 3.2 Installing the Radar over Lane



You can use tools to improve your installation, such as digital protractor, portable inclinometer, and more.


**Step 1** Install the Radar on traffic pole right above the lane.

Figure 3-3 Install the Radar on traffic pole

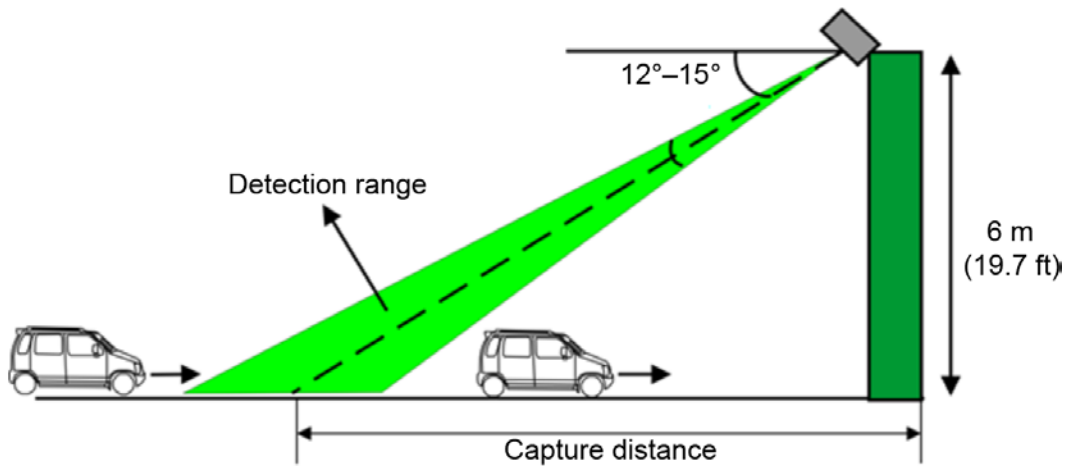

**Step 2** Adjust the Radar position to make it aim at the middle position of the detected lane.

Figure 3-4 Adjust Radar position

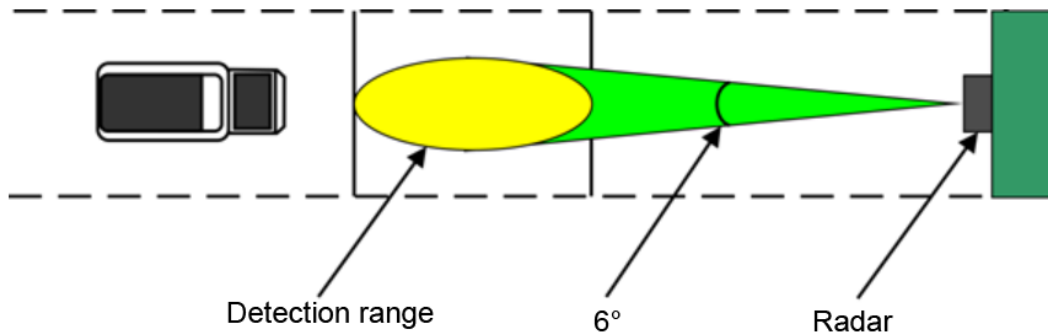


**Step 3** Adjust the installation height, elevation angle (the angle between the normal line of the radar front cover and the horizontal line), and capture distance of the Radar according to your needs.

Recommended installation: Height: 6 m (19.7 ft), elevation angle: 13°, and capture distance: 24 m (78.7 ft).



When adjusting the Radar elevation angle, keep the Radar as horizontal as possible. You can use mobile app for measuring angle to help you adjust the elevation angle.

Figure 3-5 Radar installation example

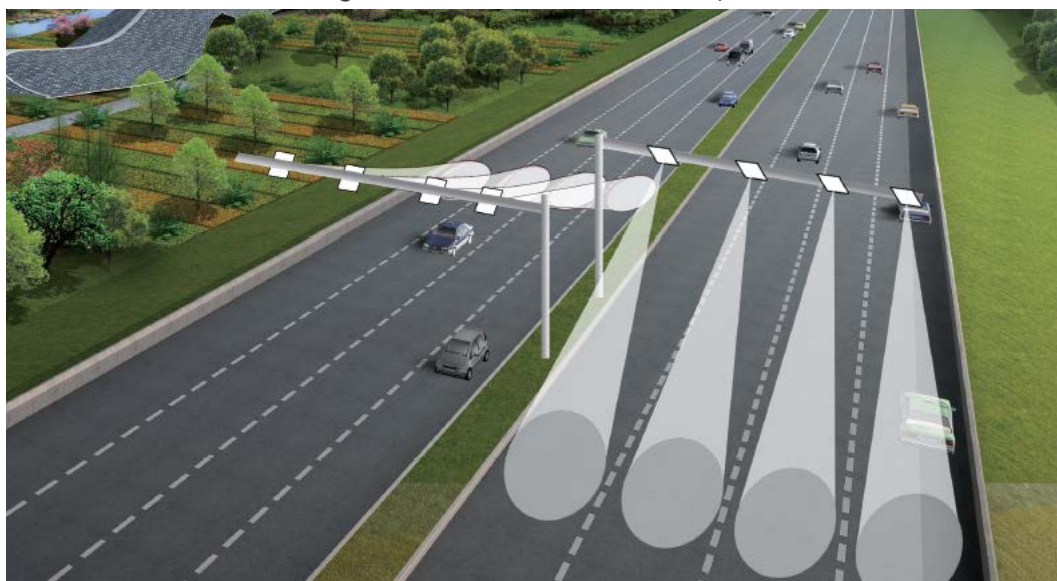

# 4 Client Operation

## 4.1 Connecting Radar

You need to connect radar before login client, and the connection can be done through Wi-Fi hotspot or port.

- Wi-Fi connection  
Normally you need a DC 12V power supply to power on the radar, and then use a computer with Wi-Fi function to search nearby hotspot. Connect the Wi-Fi named **WIFI+SN (serial number)** in searched outcomes with **DAHUA123** as password, and then login client on PC to configure the radar.
- Ethernet connection
  - Connect the radar and PC through Ethernet, and then login client on PC to configure the radar.
  - Connection details see Table 4-1.

Table 4-1 Port connection

Radar		Connection	PC	
Color of the cable	Signal		DB9 Female	Signal
Yellow	RXD		2	TXD
Green	TXD		3	RXD
Brown	GND	5	GND	

## 4.2 Installing Client

Step 1 Open the compressed file of client installation program.



You can get the installation program from technical personnel.

Step 2 Double click **setup.exe**, and then install the client following instructions.



Step 3 After finishing installation, double-click on desktop to open the radar client.

Figure 4-1 Radar client

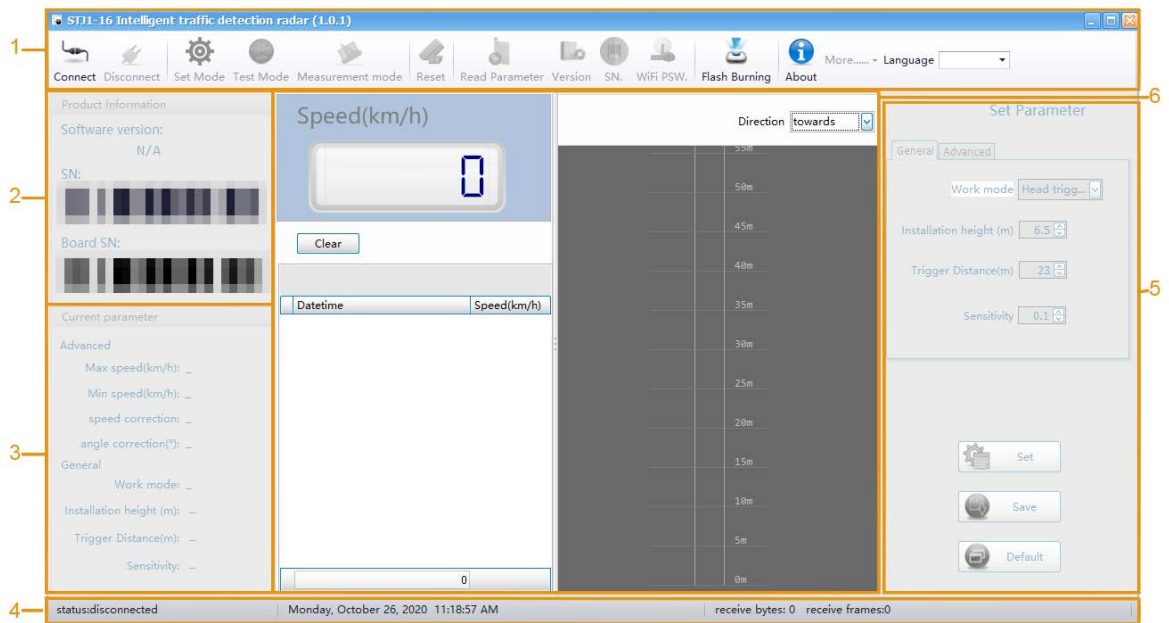


Table 4-2 Introduction of the client

No.	Name	Description
1	Function Menu	Select functions to do corresponding operations. <ul style="list-style-type: none"> <li>● Connect/Disconnect: Connect or disconnect the radar. For details see "4.3.1 Device Connection".</li> <li>● Set Mode: Configure related parameters of the radar speed measurement. For details see "4.3.3 Parameter Settings".</li> <li>● Test Mode: The normal working status of the radar, measuring vehicle speed. For details see "4.3.2 Speed Measurement Status".</li> <li>● Measurement mode: Click this and then the radar turns to measurement mode, which is used to do indoor stimulation and calibration.</li> <li>● Reset: Click this and the radar restarts.</li> <li>● Read Parameter: Click this to read and check current configured parameters.</li> <li>● Version: Click this to refresh software version.</li> <li>● SN: Click this to refresh the radar serial number.</li> <li>● WiFi PSW: Click this to reset Wi-Fi password.</li> <li>● Flash burning: Update program. For details see "5.1 Program Update".</li> <li>● About: Click this to check the client version.</li> <li>● Language: Language switch between Chinese and English, and it will take effect after restart.</li> </ul>
2	Product Information	Display the software version, SN and board SN.
3	Current Parameter	Display current configured speed measurement parameters of the radar, including advanced and general settings.

4	System Specifications	Display the connection status, system time, received bytes and frame of the radar.
5	Parameter Settings	Configure general and advanced parameters of radar speed measurement. For details see "4.3.3 Parameter Settings".
6	Speed Measurement Status	Display the speed and position of the vehicles. For details see "4.3.2 Speed Measurement Status".


## 4.3 Configuring Client

### 4.3.1 Device Connection

Click **Connect** in function menu, select **Ethernet** or **Serial** according to actual connection method, and then click **OK** to connect the radar.

- Ethernet: When connecting the radar through Wi-Fi hotspot, select this.
- Serial: When connecting the radar through serial, select this and corresponding **Port**, **Baud**, **Checkbit**, **Stopbit** and **Databit**.

Figure 4-2 Device Connection

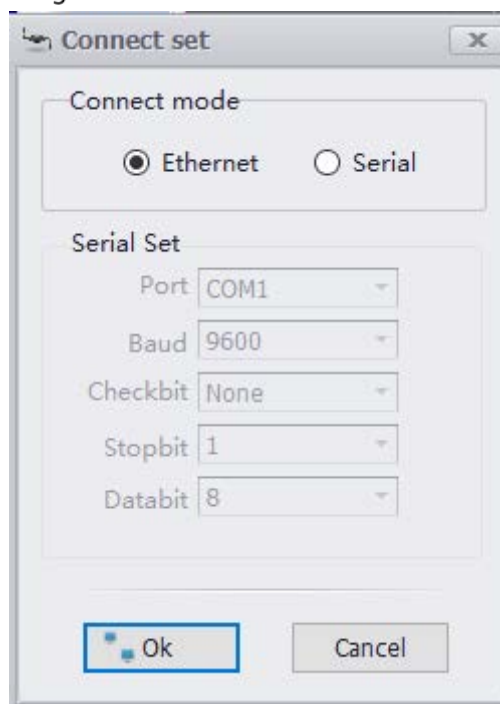

### 4.3.2 Speed Measurement Status


After successfully connected, the device will be on test status by default, namely, capture mode when the radar works properly. Under this mode, when a vehicle passes the trigger spot, its position and speed will be displayed and reported.

- Click **Clear** to delete current speed measurement data.
- Select **Towards** or **Away** in the dropdown list of **Direction**, you can select different driving direction.



- Click **Datetime** or **Speed**, you can sort the data as ascending or descending according to time or speed.

Figure 4-3 Test status

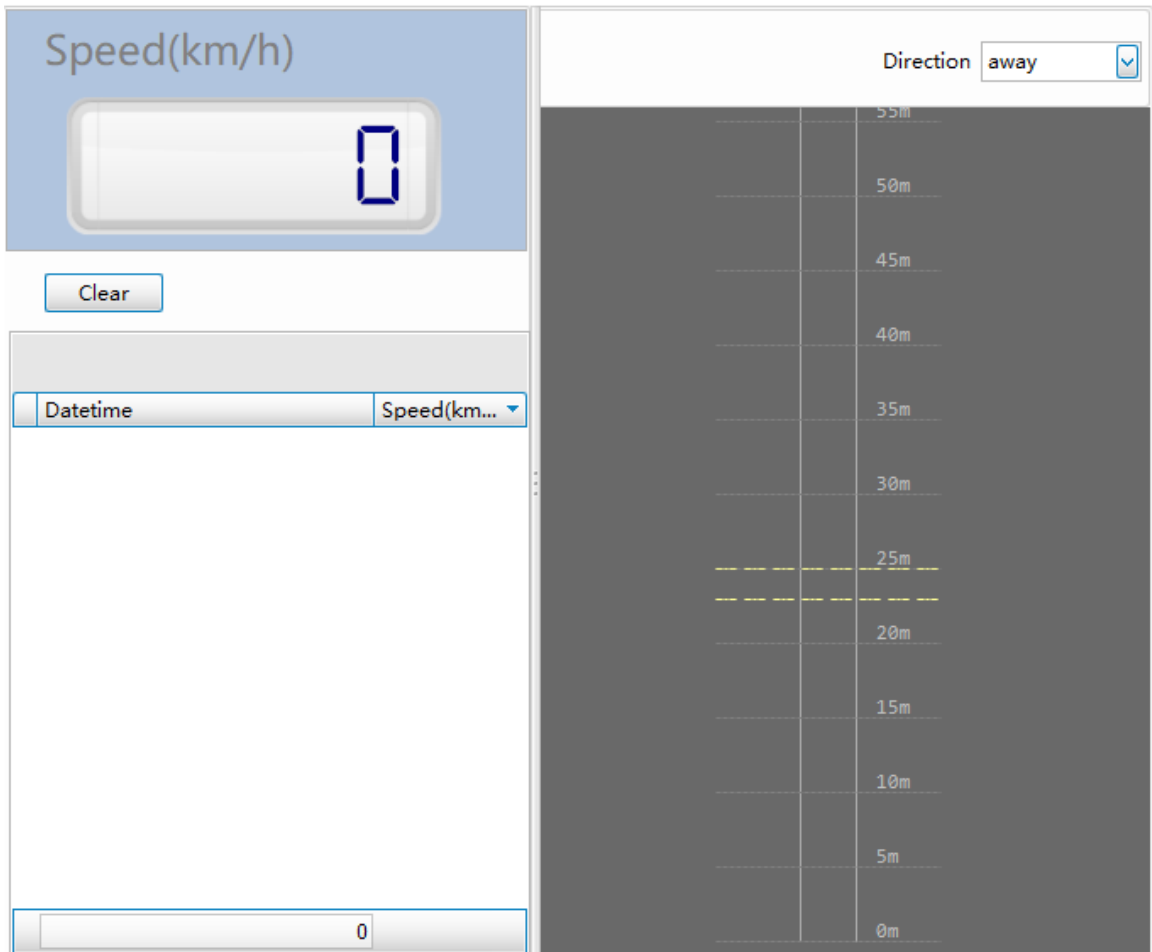

### 4.3.3 Parameter Settings

Normally you do not need to change the speed measurement parameters, if you do, you can configure the general or advanced parameters in settings.

Click **Set Mode** > **Set Parameter**, and then click **General** or **Advanced** on parameter settings interface. To configure related parameters, click **Set**.

Figure 4-4 Parameter settings

The image shows two side-by-side screenshots of the 'Set Parameter' web interface. The left screenshot shows the 'General' tab with the following settings: Work mode set to 'Head trigger', Installation height at 6.5m, Trigger Distance at 23m, and Sensitivity at 0.1. The right screenshot shows the 'Advanced' tab with: Max speed at 246 km/h, Min speed at 7 km/h, Speed correction at 3, 'Enforce' selected over 'Self-adaption', and Angle correction at -2 degrees. Both screenshots feature 'Set', 'Save', and 'Default' buttons at the bottom.

Table 4-3 Parameter description

Parameter		Description
General	Work mode	Select the mode of triggering the radar. You can choose Head trigger, Tail trigger, Continue or Both trigger.
	Installation height	Enter the actual installation height of the radar.
	Trigger Distance	Set up the distance that triggers the radar.
	Sensitivity	Set up the capture sensitivity of the Radar. The larger the value, the more sensitive the Radar.
Advanced	Max speed	Set up the maximum and minimum of the radar measured speed, used for over speed and slow speed respectively.
	Min speed	
	Speed correction	Do not modify this parameter if you are not professionals.
	Angle correction	

- Click **Save** to save current configured parameters, they will take effect after restart the radar.
- Click **Default** to restore the device parameters to original configuration.

# 5 Updating Device


## 5.1 Updating Program

Update the device program through Wi-Fi.

**Step 1** Open the client, disconnect the radar and then click **Flash Burning** on function menu bar.


**Step 2** Select **Ethernet** and then click **OK**.

Figure 5-1 Connection

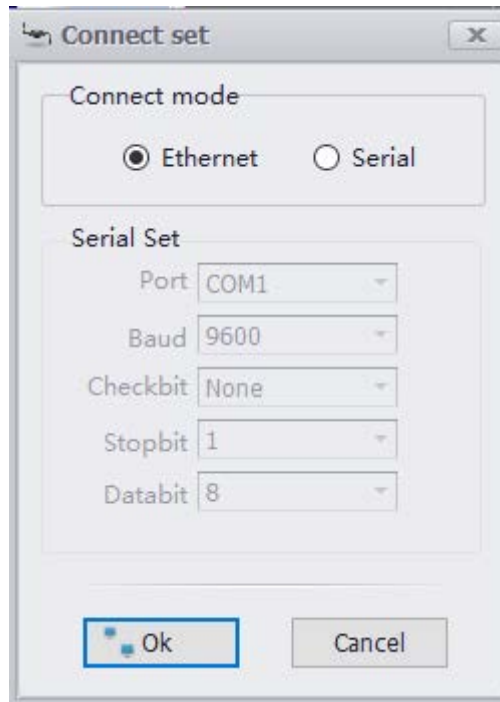

**Step 3** Click **Change**, select update file and then click **Start**.

Figure 5-2 Program Update

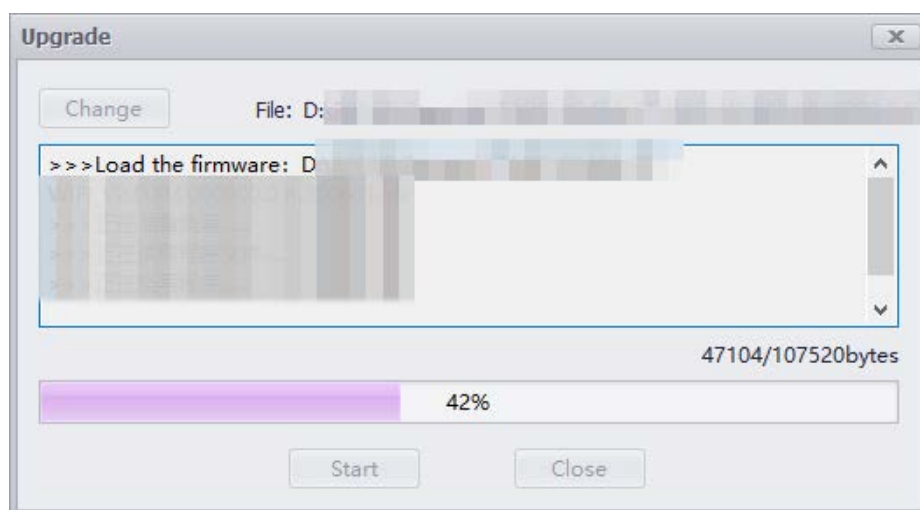

## 5.2 Updating WEB



- During updating, make sure that the radar is not power off, network off, restarting or turning off WEB.
- You can obtain the update program from technical personnel.

Supports updating the radar on WEB interface.

**Step 1** Login to WEB interface, select **Settings > System Management > Radar Update**.

**Step 2** Click **Import**, select the update file according to the path and then open it. Update the file to radar.ldr.

**Step 3** Click **Update** and then system starts to update the radar.

## 6 FAQ

The Radar is a high-technology product that requires professional operations. Read the user's manual carefully before using the Radar, or contact professionals or technical support if you have any doubts. This section provides guidance on solving some typical problems related to the Radar.

Table 6-1 FAQ

Problem	Solutions
The Radar does not work after being powered on	<ul style="list-style-type: none"> <li>● Check power connection and voltage</li> <li>● Check whether the positive and negative electrodes of power module are correctly connected</li> <li>● Check communication cable connection</li> <li>● Check the data receive interface</li> </ul>
Messy code	<ul style="list-style-type: none"> <li>● Check communication cable connection</li> <li>● Check electromagnetic compatibility (EMC) and electromagnetic interference (EMI)</li> </ul>
The Radar does not detect vehicle speed	<ul style="list-style-type: none"> <li>● Check the elevation angle of the Radar. Make sure that the area to be detected is fully covered by the radar beam</li> <li>● Check whether the elevation angle of the Radar is reasonable</li> <li>● Check whether the sensitivity is set too low</li> </ul>
The Radar detects vehicle speed but does not capture vehicles	<ul style="list-style-type: none"> <li>● Check whether there is strong electromagnetic interference and rotating object</li> <li>● Check the installation angle of the Radar, and check whether there is interference from adjacent lane</li> </ul>
Missed capture	<ul style="list-style-type: none"> <li>● Check the elevation angle of the Radar. Make sure that the area to be detected is fully covered by the radar beam</li> <li>● Check whether the capture distance is reasonable</li> <li>● Check whether the sensitivity is set too low</li> </ul>
After I connect the Radar to the camera, the camera does not capture targets	<ul style="list-style-type: none"> <li>● Check communication cable connection</li> <li>● Check whether the radar protocol matches with the camera protocol</li> <li>● Check serial port and baud rate settings of the camera</li> <li>● Check whether vehicle capture is enabled on the camera</li> <li>● Check whether radar settings on the camera web interface are correct. These settings include radar work mode, detection direction, angle, and sensitivity</li> </ul>

# Appendix 1 Cybersecurity Recommendations

Cybersecurity is more than just a buzzword: it's something that pertains to every device that is connected to the internet. IP video surveillance is not immune to cyber risks, but taking basic steps toward protecting and strengthening networks and networked appliances will make them less susceptible to attacks. Below are some tips and recommendations on how to create a more secured security system.

## **Mandatory actions to be taken for basic equipment network security:**

### **1. Use Strong Passwords**

Please refer to the following suggestions to set passwords:

- The length should not be less than 8 characters;
- Include at least two types of characters; character types include upper and lower case letters, numbers and symbols;
- Do not contain the account name or the account name in reverse order;
- Do not use continuous characters, such as 123, abc, etc.;
- Do not use overlapped characters, such as 111, aaa, etc.;

### **2. Update Firmware and Client Software in Time**

- According to the standard procedure in Tech-industry, we recommend to keep your equipment (such as NVR, DVR, IP camera, etc.) firmware up-to-date to ensure the system is equipped with the latest security patches and fixes. When the equipment is connected to the public network, it is recommended to enable the "auto-check for updates" function to obtain timely information of firmware updates released by the manufacturer.
- We suggest that you download and use the latest version of client software.

## **"Nice to have" recommendations to improve your equipment network security:**

### **1. Physical Protection**

We suggest that you perform physical protection to equipment, especially storage devices. For example, place the equipment in a special computer room and cabinet, and implement well-done access control permission and key management to prevent unauthorized personnel from carrying out physical contacts such as damaging hardware, unauthorized connection of removable equipment (such as USB flash disk, serial port), etc.

### **2. Change Passwords Regularly**

We suggest that you change passwords regularly to reduce the risk of being guessed or cracked.

### **3. Set and Update Passwords Reset Information Timely**

The equipment supports password reset function. Please set up related information for password reset in time, including the end user's mailbox and password protection questions. If the information changes, please modify it in time. When setting password protection questions, it is suggested not to use those that can be easily guessed.

### **4. Enable Account Lock**

The account lock feature is enabled by default, and we recommend you to keep it on to guarantee the account security. If an attacker attempts to log in with the wrong password several times, the corresponding account and the source IP address will be locked.

### **5. Change Default HTTP and Other Service Ports**

We suggest you to change default HTTP and other service ports into any set of numbers between 1024~65535, reducing the risk of outsiders being able to guess which ports you are using.

#### **6. Enable HTTPS**

We suggest you to enable HTTPS, so that you visit Web service through a secure communication channel.

#### **7. Enable Allowlist**

We suggest you to enable allowlist function to prevent everyone, except those with specified IP addresses, from accessing the system. Therefore, please be sure to add your computer's IP address and the accompanying equipment's IP address to the allowlist.

#### **8. MAC Address Binding**

We recommend you to bind the IP and MAC address of the gateway to the equipment, thus reducing the risk of ARP spoofing.

#### **9. Assign Accounts and Privileges Reasonably**

According to business and management requirements, reasonably add users and assign a minimum set of permissions to them.

#### **10. Disable Unnecessary Services and Choose Secure Modes**

If not needed, it is recommended to turn off some services such as SNMP, SMTP, UPnP, etc., to reduce risks.

If necessary, it is highly recommended that you use safe modes, including but not limited to the following services:

- SNMP: Choose SNMP v3, and set up strong encryption passwords and authentication passwords.
- SMTP: Choose TLS to access mailbox server.
- FTP: Choose SFTP, and set up strong passwords.
- AP hotspot: Choose WPA2-PSK encryption mode, and set up strong passwords.

#### **11. Audio and Video Encrypted Transmission**

If your audio and video data contents are very important or sensitive, we recommend that you use encrypted transmission function, to reduce the risk of audio and video data being stolen during transmission.

Reminder: encrypted transmission will cause some loss in transmission efficiency.

#### **12. Secure Auditing**

- Check online users: we suggest that you check online users regularly to see if the device is logged in without authorization.
- Check equipment log: By viewing the logs, you can know the IP addresses that were used to log in to your devices and their key operations.

#### **13. Network Log**

Due to the limited storage capacity of the equipment, the stored log is limited. If you need to save the log for a long time, it is recommended that you enable the network log function to ensure that the critical logs are synchronized to the network log server for tracing.

#### **14. Construct a Safe Network Environment**

In order to better ensure the safety of equipment and reduce potential cyber risks, we recommend:

- Disable the port mapping function of the router to avoid direct access to the intranet devices from external network.

- The network should be partitioned and isolated according to the actual network needs. If there are no communication requirements between two sub networks, it is suggested to use VLAN, network GAP and other technologies to partition the network, so as to achieve the network isolation effect.
- Establish the 802.1x access authentication system to reduce the risk of unauthorized access to private networks.
- It is recommended that you enable your device's firewall or blocklist and allowlist feature to reduce the risk that your device might be attacked.



ENABLING A SAFER SOCIETY AND SMARTER LIVING

ZHEJIANG DAHUA VISION TECHNOLOGY CO., LTD.

Address: No. 1399, Binxing Road, Binjiang District, Hangzhou, P. R. China | Website: [www.dahuasecurity.com](http://www.dahuasecurity.com) | Postcode: 310053

Email: [dhoverseas@dhvisiontech.com](mailto:dhoverseas@dhvisiontech.com) | Tel: +86-571-87688888 28933188