





AOC-AG-i2

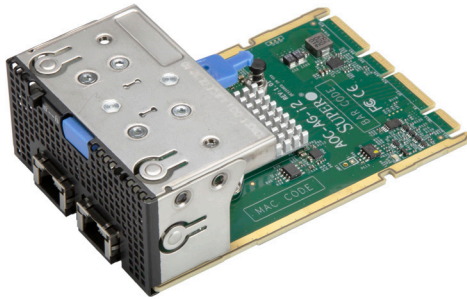

AOC-AG-i2M

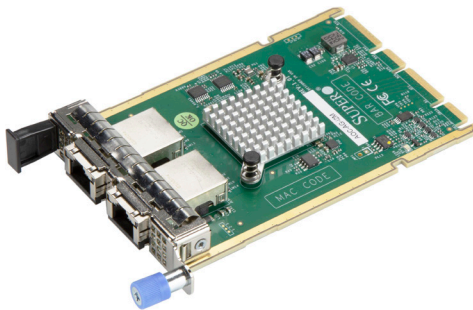

User's Guide

Revision 1.0

The information in this user's guide has been carefully reviewed and is believed to be accurate. The vendor assumes no responsibility for any inaccuracies that may be contained in this document, and makes no commitment to update or to keep current the information in this user's guide, or to notify any person or organization of the updates. **Please Note: For the most up-to-date version of this user's guide, please see our Website at www.supermicro.com.**

Super Micro Computer, Inc. ("Supermicro") reserves the right to make changes to the product described in this user's guide at any time and without notice. This product, including software and documentation, is the property of Supermicro and/or its licensors, and is supplied only under a license. Any use or reproduction of this product is not allowed, except as expressly permitted by the terms of said license.

IN NO EVENT WILL SUPER MICRO COMPUTER, INC. BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, SPECULATIVE OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OR INABILITY TO USE THIS PRODUCT OR DOCUMENTATION, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN PARTICULAR, SUPER MICRO COMPUTER, INC. SHALL NOT HAVE LIABILITY FOR ANY HARDWARE, SOFTWARE, OR DATA STORED OR USED WITH THE PRODUCT, INCLUDING THE COSTS OF REPAIRING, REPLACING, INTEGRATING, INSTALLING OR RECOVERING SUCH HARDWARE, SOFTWARE, OR DATA.

Any disputes arising between the manufacturer and the customer shall be governed by the laws of Santa Clara County in the State of California, USA. The State of California, County of Santa Clara shall be the exclusive venue for the resolution of any such disputes. Supermicro's total liability for all claims will not exceed the price paid for the hardware product.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in an industrial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instruction manual, may cause harmful interference with radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case you will be required to correct the interference at your own expense.

California Best Management Practices Regulations for Perchlorate Materials: This Perchlorate warning applies only to products containing CR (Manganese Dioxide) Lithium coin cells. "Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate".

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.



WARNING: This product can expose you to chemicals including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

User's Guide Revision 1.0

Release Date: November 3, 2020

Unless you request and receive written permission from Super Micro Computer, Inc., you may not copy any part of this document.

Information in this document is subject to change without notice. Other products and companies referred to herein are trademarks or registered trademarks of their respective companies or mark holders.

Copyright © 2020 by Super Micro Computer, Inc.

All rights reserved.

Printed in the United States of America

Preface

About this User's Guide

This user's guide is written for system integrators, IT technicians, and knowledgeable end users. It provides information for the installation and use of the AOC-AG-i2(M) add-on card.

About this Add-on Card

The Supermicro® Advanced I/O Module (AIOM) is the latest form factor designed to provide a wide range of networking options as well as other I/O technologies. The AOC-AG-i2(M) is the most flexible and scalable GbE solution with two RJ45 port support currently available on the market. Based on Intel® network controller i350, and with performance-enhancing features, power management technologies, the AOC-AG-i2(M) provides quality networking choice for datacenters while reducing CPU utilization and power consumption. With the added NC-SI feature, this adapter also functions as a secure networking port for server remote management.

An Important Note to the User

All images and layouts shown in this user's guide are based upon the latest PCB revision available at the time of publishing. The card you have received may or may not look exactly the same as the graphics shown in this user's guide.

Returning Merchandise for Service

A receipt or copy of your invoice marked with the date of purchase is required before any warranty service will be rendered. You can obtain service by calling your vendor for a Returned Merchandise Authorization (RMA) number. When returning the add-on card to the manufacturer, the RMA number should be prominently displayed on the outside of the shipping carton, and the shipping package is mailed prepaid or hand-carried. Shipping and handling charges will be applied for all orders that must be mailed when service is complete. For faster service, you can also request a RMA authorization online <http://www.supermicro.com/RmaForm/>.

This warranty only covers normal consumer use and does not cover damages incurred in shipping or from failure due to the alternation, misuse, abuse or improper maintenance of products.

During the warranty period, contact your distributor first for any product problems.

Conventions Used in the User's Guide

Pay special attention to the following symbols for proper system installation and for safety instructions to prevent damage to the system or injury to yourself:



Note: Additional information given for proper system setup.

Naming Convention for Standard Network Adapters

AOC-ATG-i2T2SM



Character	Representation	Options
1st	Product Family	AOC: Add On Card
2nd	Form Factor	S: Standard, P: Proprietary, C: MicroLP, M: Super IO Module (SIOM), MH: SIOM Hybrid A: Advanced IO Module (AIOM), AH: AIOM Hybrid
3rd	Product Type/Speed	G: GbE (1Gb/s), TG: 10GbE (10Gb/s), 25G: 25GbE (25Gb/s), 40G: 40GbE (40Gb/s), 50G: 50GbE (50Gb/s), 100G: 100GbE (100Gb/s), IBE: EDR IB (100Gb/s), HFI: Host Fabric Interface
4th	Chipset Model (Optional)	N: Niantec (82599), P: Powerville (i350), S: Sageville (X550), F: Fortville (XL710/X710), L: Lewisburg (PCH)
5th	Chipset Manufacturer	i: Intel, m: Mellanox, b: Broadcom
6th	Number of Ports	1: 1 port, 2: 2 ports, 4: 4 ports, 8: 8 ports
7th	Connector Type (Optional)	S: SFP/SFP+/SFP28, T: 10GBase-T, Q: QSFP+, C: QSFP28
8th	2 nd Controller/Connector Type (Optional)	G: 1x GbE RJ45, ZG: GbE 2x RJ45, S: 1x 10G SFP+, T: 10GBase-T, 2T: 2x 10GBase-T, 2S: 2x SFP+
9th	Bracket	For SIOM – Non-M: swappable bracket for Storage systems, M: Internal bracket for Twin systems. For AIOM – Non-M: 1U height bracket for Edge systems, M: 0.5U height bracket for all other systems.

Networking Adapter List

Model	Type	Form Factor	Controller	Connection	Dimension (w/o Brackets) (L x H)	Power (W)
AOC-MGP-i2	GbE	SIOM	Intel® i350 AM2	2 RJ45 (1Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	3.7
AOC-MGP-i4	GbE	SIOM	Intel® i350 AM4	4 RJ45 (1Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	4.4
AOC-MTGN-i2S	10GbE	SIOM	Intel® 82599A	2 SFP+ (10Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	7.2
AOC-MTG-i4S	10GbE	SIOM	Intel® XL710-BM1	4 SFP+ (10Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	7
AOC-MTG-b2T	10GbE	SIOM	Broadcom® BCM57416	2 RJ45 (10GBase-T)	3.622" (92mm) x 3.428" (87.08mm)	11
AOC-MTG-i2T	10GbE	SIOM	Intel® X550-AT2	2 RJ45 (10GBase-T)	3.622" (92mm) x 3.428" (87.08mm)	13
AOC-MTG-i4T	10GbE	SIOM	2x Intel® X550-AT2	4 RJ45 (10GBase-T)	3.622" (92mm) x 3.428" (87.08mm)	26
AOC-MHIBF-m1Q2G	FDR IB GbE	SIOM	Mellanox® ConnectX-3 Pro Intel® i350	1 QSFP (56Gb/port) 2 RJ45 (1Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	9
AOC-MHIBF-m2Q2G	FDR IB GbE	SIOM	Mellanox® ConnectX-3 Pro Intel® i350	2 QSFP (56Gb/port) 2 RJ45 (1Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	11
AOC-MHIBE-m1CG	EDR IB GbE	SIOM	Mellanox® ConnectX-4 VPI Intel® i210	1 QSFP28 (100Gb/port) 1 RJ45 (1Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	19
AOC-MH25G-b2S2G	25GbE	SIOM	Broadcom® BCM57414 Intel® i350	2 SFP28 (25Gb/port) 2 RJ45 (1Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	9
AOC-MH25G-m2S2T	25GbE	SIOM	Mellanox® ConnectX-4 Lx EN Intel® X550-A T2	2 SFP28 (25Gb/port) 2 RJ45 (10GBase-T)	3.622" (92mm) x 3.428" (87.08mm)	25
AOC-M25G-m4S	25GbE	SIOM	Mellanox® ConnectX-4 Lx EN	4 SFP28 (25Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	20
AOC-M25G-i2S	25GbE	SIOM	Intel® XXV710	2 SFP28 (25Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	11.8
AOC-MHFI-i1C	Omni-Path	SIOM	Intel® OP HFI ASIC (Wolf River WFR-B)	1 QSFP28 (100Gb/port)	3.622" (92mm) x 3.428" (87.08mm)	15



Note: The table above is continued on the next page.

Model	Type	Form Factor	Interface	Controller	Connection	Dimension (w/o Brackets) (L x H)	Power (W)
AOC-SGP-i2	GbE	Standard LP	PCI-E x4	Intel® i350 AM2	2 RJ45 (1Gb/port)	3.9" (99mm) x 2.73" (69mm)	3.5
AOC-SGP-i4	GbE	Standard LP	PCI-E x4	Intel® i350 AM4	4 RJ45 (1Gb/port)	3.9" (99mm) x 2.73" (69mm)	5
AOC-STG-i2T	10GbE	Standard LP	PCI-E x8	Intel® X540-AT2	2 RJ45 (10GbBase-T)	5.9" (150mm) x 2.73" (69mm)	13
AOC-STG5-i1T	10GbE	Standard LP	PCI-E x4	Intel® X550-AT	1 RJ45 (10GbBase-T)	5.9" (150mm) x 2.73" (69mm)	9
AOC-STG5-i2T	10GbE	Standard LP	PCI-E x4	Intel® X550-AT2	2 RJ45 (10GbBase-T)	5.9" (150mm) x 2.73" (69mm)	11
AOC-STG-b2T	10GbE	Standard LP	PCI-E x8	Broadcom® BCM57416	2 RJ45 (10GbBase-T)	5.6" (142mm) x 2.73" (69mm)	13.1
AOC-STG-i4T	10GbE	Standard LP	PCI-E x8	Intel® XL710-BM1	4 RJ45 (10GbBase-T)	5.9" (149mm) x 2.73" (69mm)	15.5
AOC-STGN-i1S	10GbE	Standard LP	PCI-E x8	Intel® 82599EN	1 SFP+ (10Gb/port)	4.0" (102mm) x 2.73" (69mm)	10
AOC-STGN-i2S	10GbE	Standard LP	PCI-E x8	Intel® 82599ES	2 SFP+ (10Gb/port)	4.0" (102mm) x 2.73" (69mm)	11.2
AOC-STOF-i2S	10GbE	Standard LP	PCI-E x8	Intel® X710-BM2	2 SFP+ (10Gb/port)	5.19" (132mm) x 2.73" (69mm)	5.6
AOC-STG-b4S	10GbE	Standard LP	PCI-E x8	Broadcom® BCM57840S	4 SFP+ (10Gb/port)	5.4" (137mm) x 2.73" (69mm)	14
AOC-STG-i4S	10GbE	Standard LP	PCI-E x8	Intel® XL710-BM1	4 SFP+ (10Gb/port)	5.9" (150mm) x 2.73" (69mm)	8
AOC-S25G-m2S	25GbE	Standard LP	PCI-E x8	Mellanox® CX-4 LX	2 SFP28 (25Gb/port)	5.6" (142mm) x 2.713" (69mm)	8.7
AOC-S25G-b2S	25GbE	Standard LP	PCI-E x8	Broadcom® BCM57414	2 SFP28 (25Gb/port)	5.6" (142mm) x 2.713" (69mm)	5.2
AOC-S25G-i2S	25GbE	Standard LP	PCI-E x8	Intel® XXV710	2 SFP28 (25Gb/port)	6.1" (155mm) x 2.713" (69mm)	7.2
AOC-S40G-i1Q	40GbE	Standard LP	PCI-E x8	Intel® XL710-BM1	1 QSFP+ (40Gb/port)	5.9" (150mm) x 2.73" (69mm)	6.5
AOC-S40G-i2Q	40GbE	Standard LP	PCI-E x8	Intel® XL710-BM2	2 QSFP+ (40Gb/port)	5.9" (150mm) x 2.73" (69mm)	7
AOC-S100G-m2C	100GbE	Standard LP	PCI-E x16	Mellanox® CX-4 EN	2 QSFP28 (100Gb/port)	6.6" (168mm) x 2.73" (69mm)	16.3
AOC-S100G-b1C	100GbE	Standard LP	PCI-E x16	Broadcom® BCM57454	2 QSFP28 (100Gb/port)	6.6" (168mm) x 2.73" (69mm)	17.8
AOC-CGP-i2	GbE	MicroLP	PCI-E x4	Intel® i350 AM2	2 RJ45 (1Gb/port)	4.46" (113mm) x 1.54" (39mm)	4
AOC-CTG-i1S	10GbE	MicroLP	PCI-E x8	Intel® 82599EN	1 SFP+ (10Gb/port)	4.86" (123mm) x 1.54" (39mm)	10
AOC-CTG-i2S	10GbE	MicroLP	PCI-E x8	Intel® 82599ES	2 SFP+ (10Gb/port)	4.86" (123mm) x 1.54" (39mm)	11
AOC-CTG-i2T	10GbE	MicroLP	PCI-E x8	Intel® X540-AT2	2 RJ45 (10GbBase-T)	4.8" (123mm) x 2.75" (77mm)	13
AOC-CTG5-i2T	10GbE	MicroLP	PCI-E x4	Intel® X550-AT2	2 RJ45 (10GbBase-T)	4.46" (113mm) x 1.54" (39mm)	12
AOC-C25G-m1S	25GbE	MicroLP	PCI-E x8	Mellanox® CX-4 Lx EN	1 SFP28 (25Gb/port)	4.46" (113mm) x 1.54" (39mm)	8.5

Contacting Supermicro

Headquarters

Address: Super Micro Computer, Inc.
980 Rock Ave.
San Jose, CA 95131 U.S.A.

Tel: +1 (408) 503-8000

Fax: +1 (408) 503-8008

Email: marketing@supermicro.com (General Information)
support@supermicro.com (Technical Support)

Website: www.supermicro.com

Europe

Address: Super Micro Computer B.V.
Het Sterrenbeeld 28, 5215 ML
's-Hertogenbosch, The Netherlands

Tel: +31 (0) 73-6400390

Fax: +31 (0) 73-6416525

Email: sales@supermicro.nl (General Information)
support@supermicro.nl (Technical Support)
rma@supermicro.nl (Customer Support)

Website: www.supermicro.nl

Asia-Pacific

Address: Super Micro Computer, Inc.
3F, No. 150, Jian 1st Rd.
Zhonghe Dist., New Taipei City 235
Taiwan (R.O.C)

Tel: +886-(2) 8226-3990

Fax: +886-(2) 8226-3992

Email: support@supermicro.com.tw

Website: www.supermicro.com.tw

Table of Contents

Preface

Chapter 1 Overview

1-1	Overview	1-1
1-2	Product Highlights	1-1
1-3	Technical Specifications	1-2
1-4	Available SKUs	1-4

Chapter 2 Hardware Components

2-1	Add-On Card Image and Layout.....	2-1
2-2	Major Components.....	2-3
2-3	LED Indicators and Connectors.....	2-4
2-4	PCI-E 2.1 x4 AIOM Form Factor Connector.....	2-6

Chapter 3 Installation

3-1	Static-Sensitive Devices.....	3-1
3-2	Before Installation	3-2
3-3	Installing the Add-on Card AOC-AG-i2 (with 1U bracket).....	3-3
3-4	Installing the Add-on Card AOC-AG-i2M (with 0.5U bracket).....	3-6
3-5	Installing Drivers on Windows (for Intel® i350-AM2).....	3-9
3-6	Installing Drivers on Linux (for Intel® i350-AM2).....	3-10
3-7	Installing Drivers on FreeBSD (for Intel® i350-AM2).....	3-11


Chapter 1

Overview

1-1 Overview

Congratulations on purchasing your add-on card from an acknowledged leader in the industry. Supermicro products are designed with the utmost attention to detail to provide you with the highest standards in quality and performance. For product support and updates, please refer to our website at <http://www.supermicro.com/products/info/networking.cfm#adapter>.

1-2 Product Highlights

- Advanced I/O Module (AIOM) form factor
- Two 1Gbps ports with RJ45 connectors
- Intel® i350 GbE controller
- Energy Efficient Ethernet (EEE)
- Reliable and proven Gigabit Ethernet technology
- Asset Management features with thermal sensor
- NC-SI for Remote Management
- RoHS compliant 6/6 

1-3 Technical Specifications

General

- Advanced I/O Module (AIOM) form factor
- Intel® i350 GbE controller
- Two 1Gbps ports: 2x RJ45 connectors

Networking Features

- IEEE 802.3 auto-negotiation for speed, duplex, and flow control
- IEEE 802.3x and 802.3z compliant flow control support
- Automatic cross-over detection function (MDI/MDI-X)
- 1Gb/s Ethernet IEEE 802.3, 802.3u, 802.3ab PHY specifications compliant

Virtualization Features

- PC-SIG SR-IOV support
- VM to VM packet forwarding (packet loopback)
- Flexible port partitioning
- IEEE 802.1q VLAN support
- IEEE 802.1q advanced packet filtering
- Jumbo frames support

Power Management and Efficiency

- Energy Efficient Ethernet (EEE)
- DMA Coalescing reduces platform power consumption
- PCI Express Active State Power Management (ASPM)

- LAN disable function
- Low Power Link Up – Link Speed Control

Performance Features

- TCP/UDP, IPv4, and IPv6 checksum offloads to improve CPU usage
- Low latency interrupts
- Tx TCP segmentation offload (IPv4, IPv6) increases throughput and lowers processor usage
- Receive Side Scaling (RSS) for Windows environment, Scalable I/O for Linux environments
- Intelligent interrupt generation

Management Features

- Preboot eXecution Environment (PXE) support
- iSCSI remote boot support
- Asset Management support on Supermicro® platforms
- NC-SI for remote management

OS Support

- Windows® Server
- RedHat Linux
- SUSE Linux
- FreeBSD
- UEFI
- VMWare

Power Consumption (Max)

- AOC-AG-i2(M): 3.7W

Operating Conditions

- Storage temperature: -40°C to 70°C (-40°F to 158°F)
- Storage humidity: 90% non-condensing relative humidity at 35°C

Physical Dimensions

- Card PCB dimensions: 76mm x 115mm (W x D)



Note: This product is only sold as part of an integrated solution with Supermicro server systems.


1-4 Available SKUs

SKUs	Bracket Included	Description
AOC-AG-i2	BKT-0167L	2-port Gigabit Ethernet Adapter with an 1U height bracket
AOC-AG-i2M	BKT-0168L	2-port Gigabit Ethernet Adapter with an 0.5U height bracket


Chapter 2

Hardware Components


2-1 Add-On Card Image and Layout

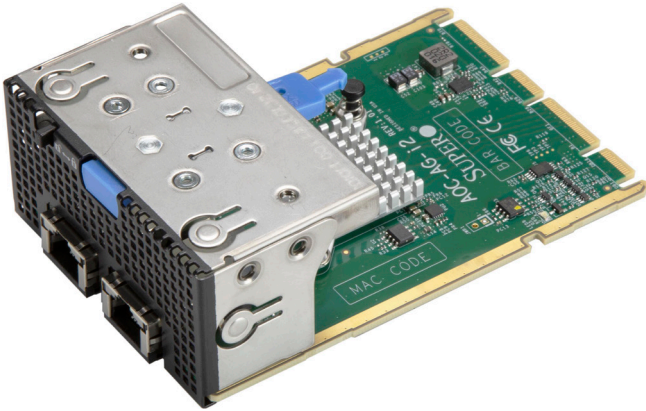

AOC-AG-i2 Image

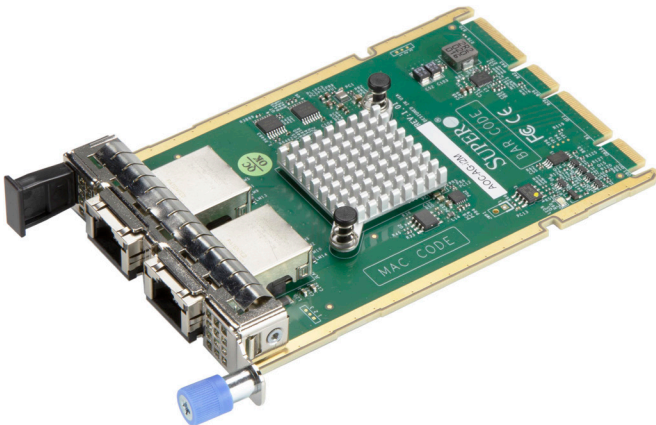

AOC-AG-i2M Image

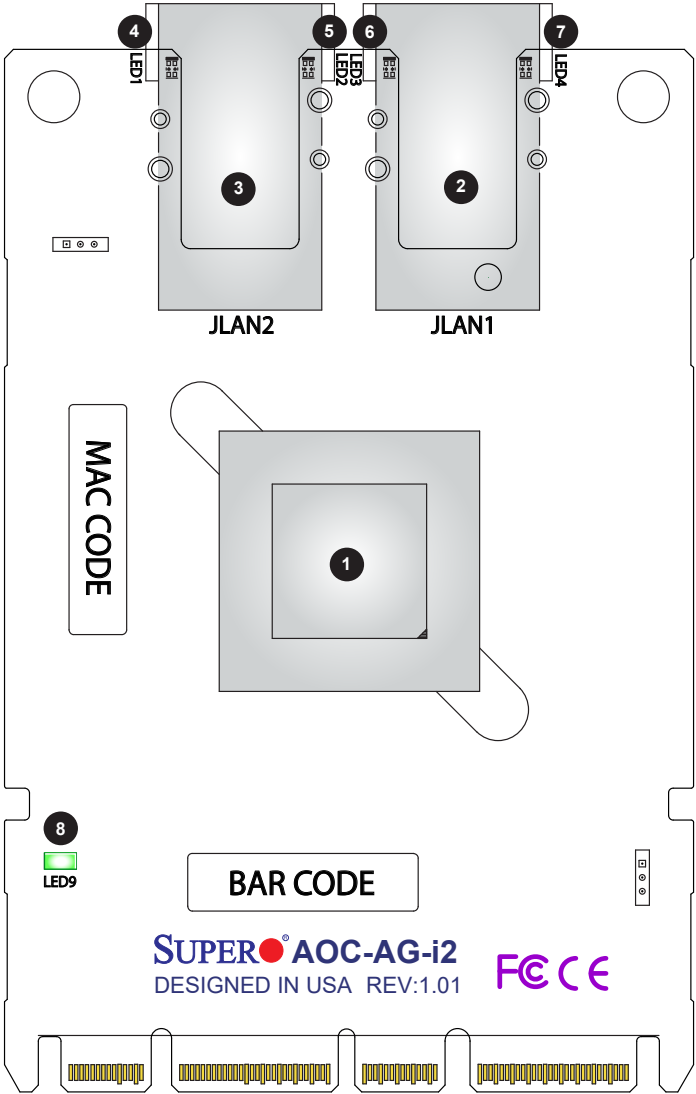

2-2 Major Components


The following components are on the AOC-AG-i2(M):

AOC-AG-i2(M) Major Components		
No	Component Name	Definition
1	Intel® i350 GbE	Ethernet controller
2	JLAN1	LAN (RJ45) Port
3	JLAN2	LAN (RJ45) Port
4	LED1	LAN (RJ45) Port 2 Active LED
5	LED2	LAN (RJ45) Port 2 Link LED
6	LED3	LAN (RJ45) Port 1 Active LED
7	LED4	LAN (RJ45) Port 1 Link LED
8	LED9	On: Power Rails Ready
		Off: Power Rails Not Ready


2-3 LED Indicators and Connectors


LAN Ports

The AOC-AG-i2(M) has two network LAN (RJ45) ports. These LAN ports support connection speeds up to 1Gbps. Plug the Direct Attached Copper (DAC) cable into the RJ45 port for network connections.


 **Note 1:** To make sure that LAN port functions properly, be sure to use the following cable specified by the manufacturer:

- Direct-attached twin-axial copper cable, or
- Short Range or Long Range fiber optic cable used in conjunction with optional optical transceiver.

 **Note 2:** For detailed information on the cable and transceiver recommended by the manufacturer, please refer to "Optional Accessories" on Page 1-4 or SMC product information posted online.

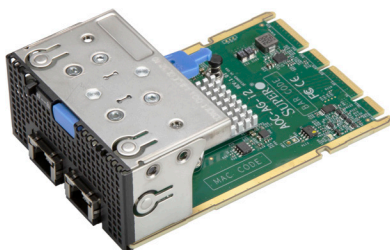

AOC-AG-i2 Image

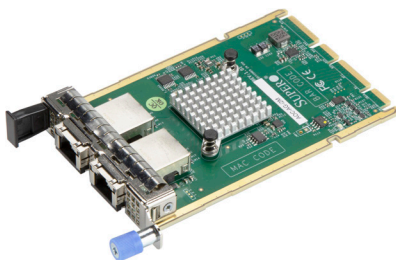

AOC-AG-i2M Image

LED	Color	Definition
Link (Left)	Green	1 Gbps Link Speed
	Amber	100 Mbps Link Speed
Activity (Right)	Green Flashing	Activity


LAN LED

Each RJ45 connector has two LEDs. The LEDs on the left of a port (LED 2 and 4) indicates link speeds, and the LEDs on the right (LED 1 and 3) indicates the status of activity of the connector. See the table above for more information.

2-4 PCI-E 2.1 x4 AIOM Form Factor Connector

PCI-E 2.1 x4 AIOM Form Factor Connector

Insert the PCI-E 2.1 x4 AIOM form factor connector into a PCI-E 2.1 x4 AIOM form factor slot on a motherboard to use this AIOM Form factor card. See the layout below for the location.

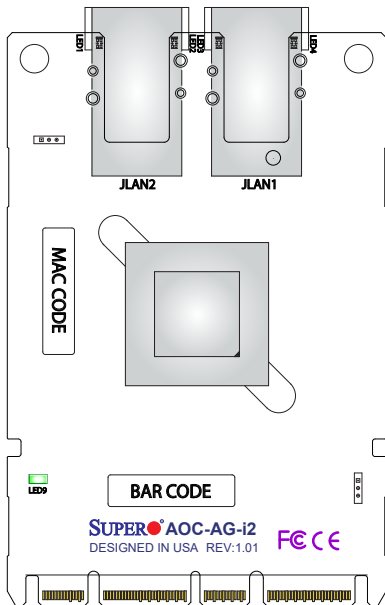

1. PCI-E 2.1 x4 AIOM Form factor connector

Chapter 3

Installation

3-1 Static-Sensitive Devices

Electrostatic Discharge (ESD) can damage electronic components. To avoid damaging your add-on card, it is important to handle it very carefully. The following measures are generally sufficient to protect your equipment from ESD.

Precautions

- Use a grounded wrist strap designed to prevent static discharge.
- Touch a grounded metal object before removing the add-on card from the antistatic bag.
- Handle the add-on card by its edges only; do not touch its components.
- Put the add-on card back into the antistatic bags when not in use.
- For grounding purposes, make sure that your system chassis provides excellent conductivity between the power supply, the case, the mounting fasteners, and the add-on card.

Unpacking

The add-on card is shipped in antistatic packaging to avoid static damage. When unpacking your component or system, make sure that you are static protected.



Note: To avoid damaging your components and to ensure proper installation, always connect the power cord last, and always unplug it before adding, removing, or changing any hardware components.

3-2 Before Installation

Before you install the add-on card, follow the instructions below.


1. Power down the system.
2. Unplug the power cord.
3. Use industry-standard anti-static equipment such as gloves or a wrist strap and follow the precautions on page 3-1 to avoid damage caused by ESD.
4. Familiarize yourself with the server, motherboard, and/or chassis documentation.
5. Confirm that your operating system includes the latest updates and hotfixes.

3-3 Installing the Add-on Card AOC-AG-i2 (with 1U bracket)

Follow the steps below to install an add-on card into your system. (If the system is fixed onto a rack, the removal of server top cover is not required. If the system is not anchored to a fixed structure, it is recommended to remove the system top cover for ease of installation)

A. Uninstalling an AIOM module (A slot with an AIOM module installed)

1. Slide the black latch to the left to the "unlock" position, then disengage the AIOM module from the chassis structure by pushing the blue latch once to extend it outward.

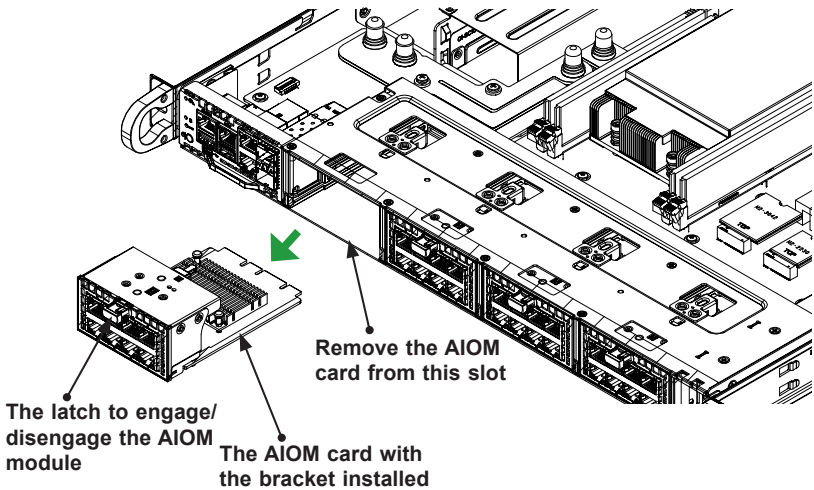



B. Installing an AIOM module (Reinstalling an AIOM module into an empty slot)


1. Position the AIOM module in front of the empty slot and gently push it onto the metal bracket (do not use the blue latch). The AIOM module should slide into the chassis until the card is securely seated in the chassis.
2. Press the blue latch to properly secure it onto the chassis and move the black latch to the right to the "lock" position.



Black Latch

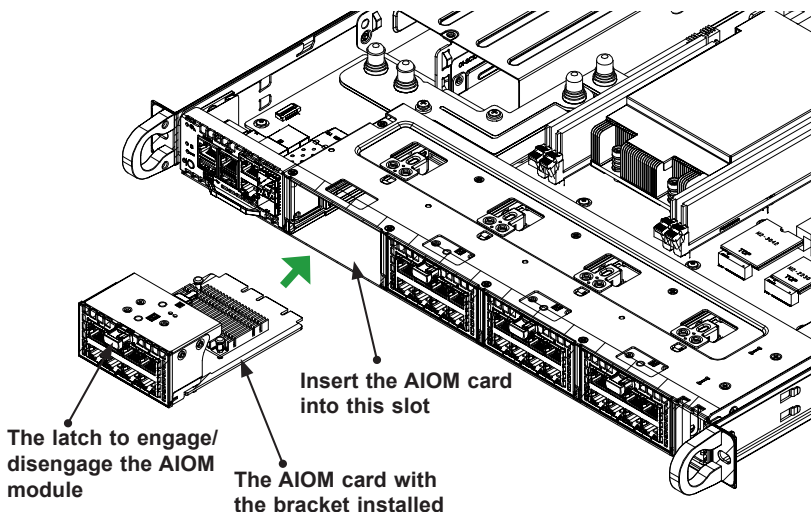

 **Note:** A computer system should not be operating with an empty AIOM slot. All slots should be populated with AIOM modules, AIOM slot covers, or combinations of both.

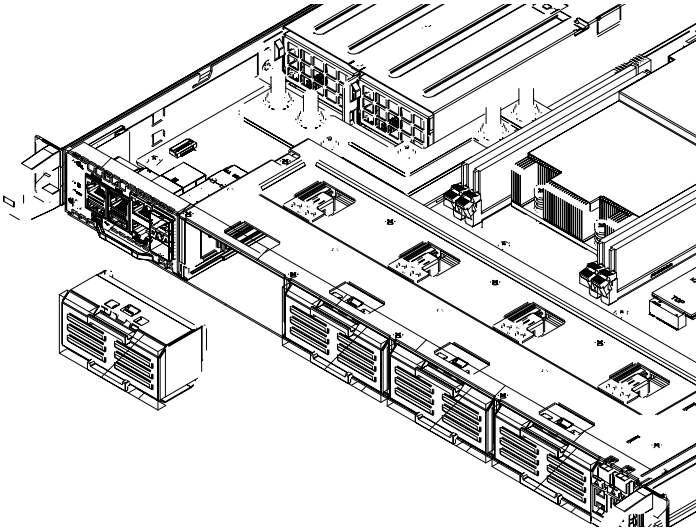


3-4 Installing the Add-on Card AOC-AG-i2M (with 0.5U bracket)

Follow the steps below to install an add-on card into your system. (If the system is fixed onto a rack, the removal of server top cover is not required. If the system is not anchored to a fixed structure, it is recommended to remove the system top cover for ease of installation)


A. Uninstalling an AIOM module – AOC-AG-i2M (Card with 0.5U bracket)

1. Unscrew the blue knob from the system.
2. Pull on the tab and a knob evenly on both sides of the card to disengage the AIOM module from the motherboard connector, then gently slide the AIOM module out.

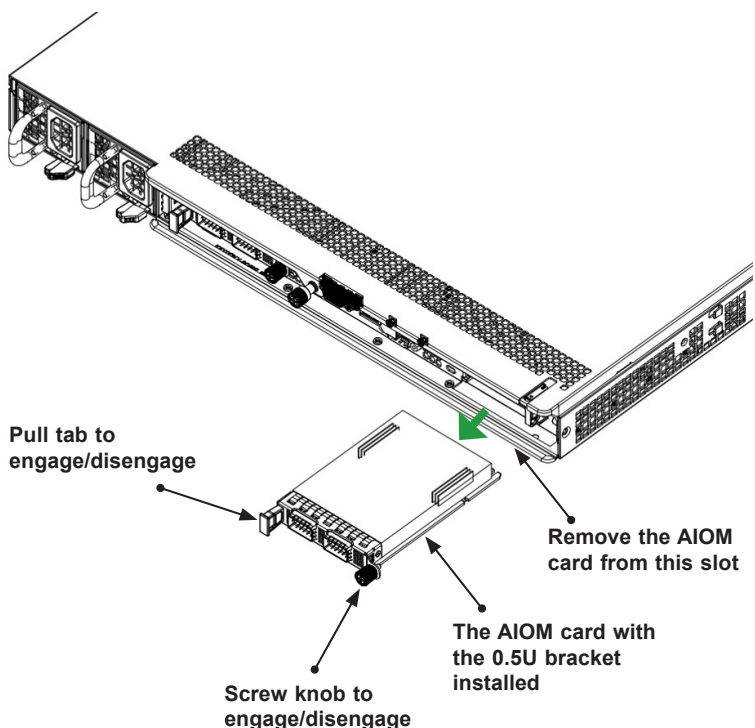


B. Installing an AIOM module – AOC-AG-i2M (Card with 0.5U bracket)


1. Position the AIOM module in front of the empty slot and gently push onto the metal bracket. The AIOM module should slide into the chassis until the card is securely seated in the connector.
2. Press the blue knob and secure it onto the chassis by turning the knob clockwise.

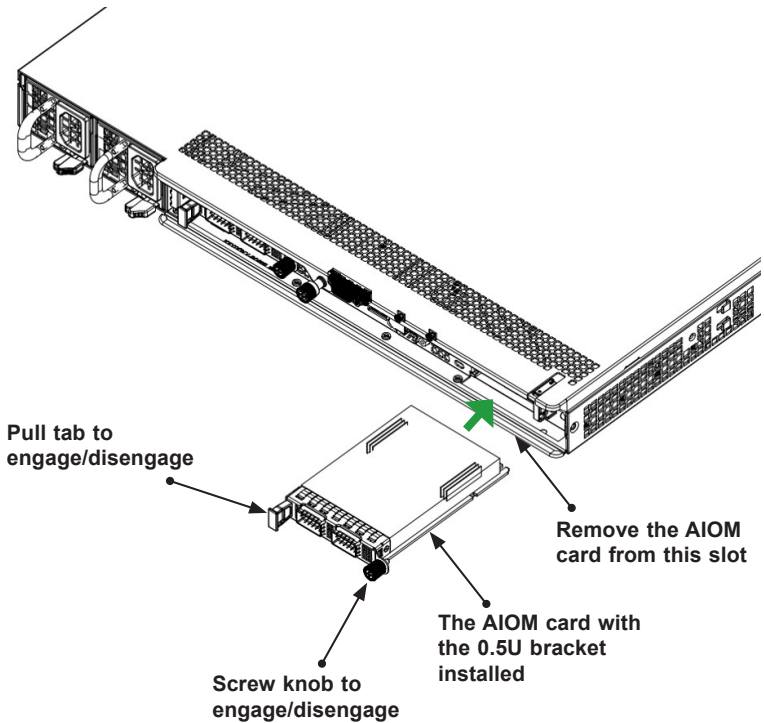

C. Installing an AIOM module (An AIOM slot with an AIOM slot cover)

1. Remove the AIOM slot cover by unscrewing the knob and screw that attaches the bracket to the chassis. Pull the bracket away and set it aside.
2. Position the AIOM module in front of the empty slot and gently push onto the metal bracket. The AIOM module should slide into the chassis until the card is securely seated in the connector.
3. Press the blue knob and secure it onto the chassis by turning the knob clockwise.

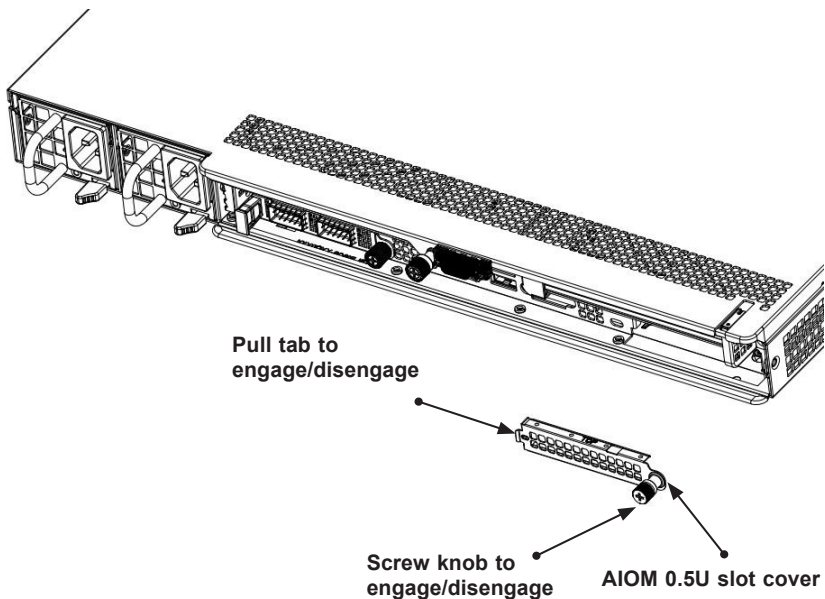


 **Note 1:** This AIOM module does not support hot plug. Please turn off the AC power and remove the power cord from the wall socket before installing or removing an AIOM module.

Note 2: Pictures shown above are for illustration purposes only. The pictures of the actual product may vary due to product enhancement.

3-5 Installing Drivers on Windows (for Intel® i350-AM2)

Follow the steps below to install the drivers for the Windows operating systems. Download the drivers from Intel® Download Center or the Supermicro site at https://www.supermicro.com/wftp/Networking_Drivers.

1. Run CDR-NIC.
2. When the SUPERMICRO window appears, click on the computer icon next to the product model.

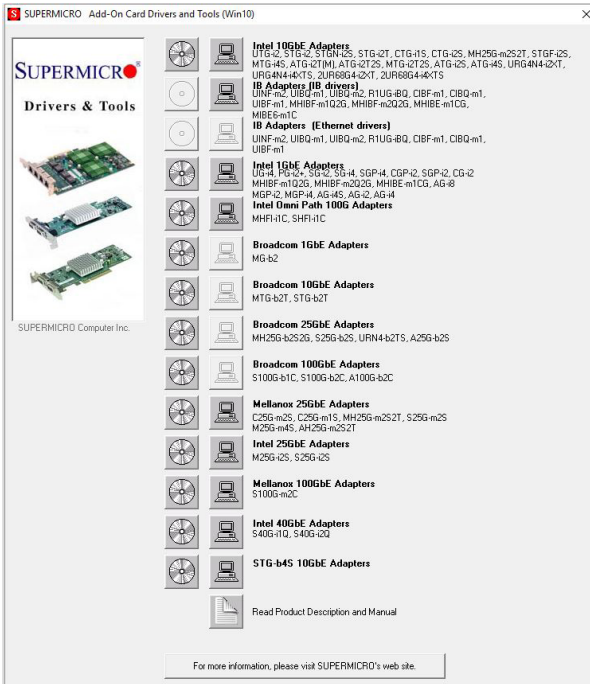

Note: If the *FOUND NEW HARDWARE WIZARD* screen displays on your system, click CANCEL.

3. Click on INSTALL DRIVERS AND SOFTWARE.
4. Follow the prompts to complete the installation.

3-6 Installing Drivers on Linux (for Intel® i350-AM2)

Download the drivers from Intel® Download Center or the Supermicro site at https://www.supermicro.com/wftp/Networking_Drivers.

Build a Binary RPM Package

1. Run 'rpmbuild -tb <filename.tar.gz>'
2. Replace <filename.tar.gz> with the specific filename of the driver.



Note: For the build to work properly, the current running kernel MUST match the version and configuration of the installed kernel sources. If you have just recompiled the kernel, reboot the system at this time.

Follow the instructions below to build the driver manually.

1. Move the base driver tar file to the directory of your choice. For example:

```
/home/username/igb
```

or

```
/usr/local/src/igb
```

2. Untar/unzip archive, where <x.x.x> is the version number for the driver tar file:

```
tar xzf igb-x.x.x.tar.gz
```

3. Change to the driver src directory, where <x.x.x> is the version number for the driver tar:

```
cd igb-x.x.x/src/
```

4. Compile the driver module:

```
make install
```

The binary will be installed as:

```
/lib/modules/[KERNEL_VERSION]/kernel/drivers/net/igb/igb.[k]o
```

The install locations listed above are the default locations. They may not be correct for certain Linux distributions. For more information, see the `ldistrib.txt` file included in the driver tar.



Note: IGB_NO_LRO is a compile time flag. The user can enable it at compile time to remove support for LRO from the driver. The flag is used by adding CFLAGS_EXTRA="-DIGB_NO_LRO" to the make file when it's being compiled.

```
make CFLAGS_EXTRA="-DIGB_NO_LRO" install
```

5. Load the module:

For kernel 2.6.x, use the modprobe command:

```
modprobe igb <parameter>=<value>
```

For 2.6 kernels, the *insmod* command can be used if the full path to the driver module is specified. For example:

```
insmod /lib/modules/<KERNEL_VERSION>/kernel/drivers/net/  
igb/igb.ko
```

In addition, when using 2.6-based kernels, make sure that older igb drivers are removed from the kernel before loading the new module. To do this, use:

```
rmmod igb; modprobe igb
```

6. Assign an IP address to the interface by entering the following, where x is the interface number:

```
ifconfig ethx <IP_address> netmask <netmask>
```

7. Verify that the interface works. Enter the following, where <IP_address> is the IP address for another machine on the same subnet as the interface that is being tested:

```
ping <IP_address>
```

3-7 Installing Drivers on FreeBSD (for Intel® i350-AM2)

Follow the instructions below to install the drivers for FreeBSD kernel 4.8 or later. In the instructions below, x.x.x is the driver version as indicated in the name of the drive tar file.



Note: You must have kernel sources installed in order to compile the driver module.

1. Move the base driver tar file to the directory of your choice. For example, use /home/username/igb or /usr/local/src/igb.

2. Untar/unzip the archive:

```
tar xfz igb-x.x.x directory
```

3. To install man page:

```
cd igb-x.x.x
gzip -c igb.4 > /usr/share/man/man4/igb.4.gz
```

4. To load the driver onto a running system, perform the following steps:

```
cd igb-x.x.x
make
or
cd igb-x.x.x/src
make load
```

5. To assign an IP address to the interface, enter the following:

```
ifconfig igb<interface_num> <IP_address>
```

6. Verify that the interface works. Enter the following, where <IP_address> is the IP address for another machine on the same subnet as the interface that is being tested:

```
ping <IP_address>
```

7. If you want the driver to load automatically when the system is booted:

```
cd igb-x.x.x/src
make load
cp if_igb.ko /modules
```

Edit `/boot/loader.conf`, and add the following line:

```
if_igb_load="YES"
```

or

compile the driver into the kernel (see item 8). Edit `/etc/rc.conf`, and create the appropriate `ifconfig_igb<interface_num>` entry:

```
ifconfig_igb<interface_num>="<ifconfig_settings>"
```

Example usage:

```
ifconfig_igb0="inet 192.168.10.1 netmask 255.255.255.0"
```

8. If you want to compile the driver into the kernel, enter:

```
cd igb-x.x.x/src
mkdir /usr/src/sys/dev/igb
cp if_igb* /usr/src/sys/dev/igb
cp igb* /usr/src/sys/dev/igb
cp Makefile.kernel /usr/src/sys/modules/igb/Makefile
```

Edit the `/usr/src/sys/conf/files.i386` file, and add the following line:

```
dev/igb/igb_hw.c optional igb
dev/igb/igb_ee.c optional igb
dev/igb/if_igb.c optional igb
```

Remove the following lines from the `/usr/src/sys/conf/files.i386` file, if they exist:

```
/dev/igb/if_igb_fx_hw.c optional igb
/dev/igb/if_igb_phy.c optional igb
```

Edit the kernel configuration file (i.e., `GENERIC` or `MYKERNEL`) in `/usr/src/sys/i386/conf`, and ensure the following line is present:

```
device igb
```

Compile and install the kernel. Reboot the system for the kernel updates to take affect.

(Disclaimer Continued)

The products sold by Supermicro are not intended for and will not be used in life support systems, medical equipment, nuclear facilities or systems, aircraft, aircraft devices, aircraft/emergency communication devices or other critical systems whose failure to perform be reasonably expected to result in significant injury or loss of life or catastrophic property damage. Accordingly, Supermicro disclaims any and all liability, and should buyer use or sell such products for use in such ultra-hazardous applications, it does so entirely at its own risk. Furthermore, buyer agrees to fully indemnify, defend and hold Supermicro harmless for and against any and all claims, demands, actions, litigation, and proceedings of any kind arising out of or related to such ultra-hazardous use or sale.